

FIG. 1A

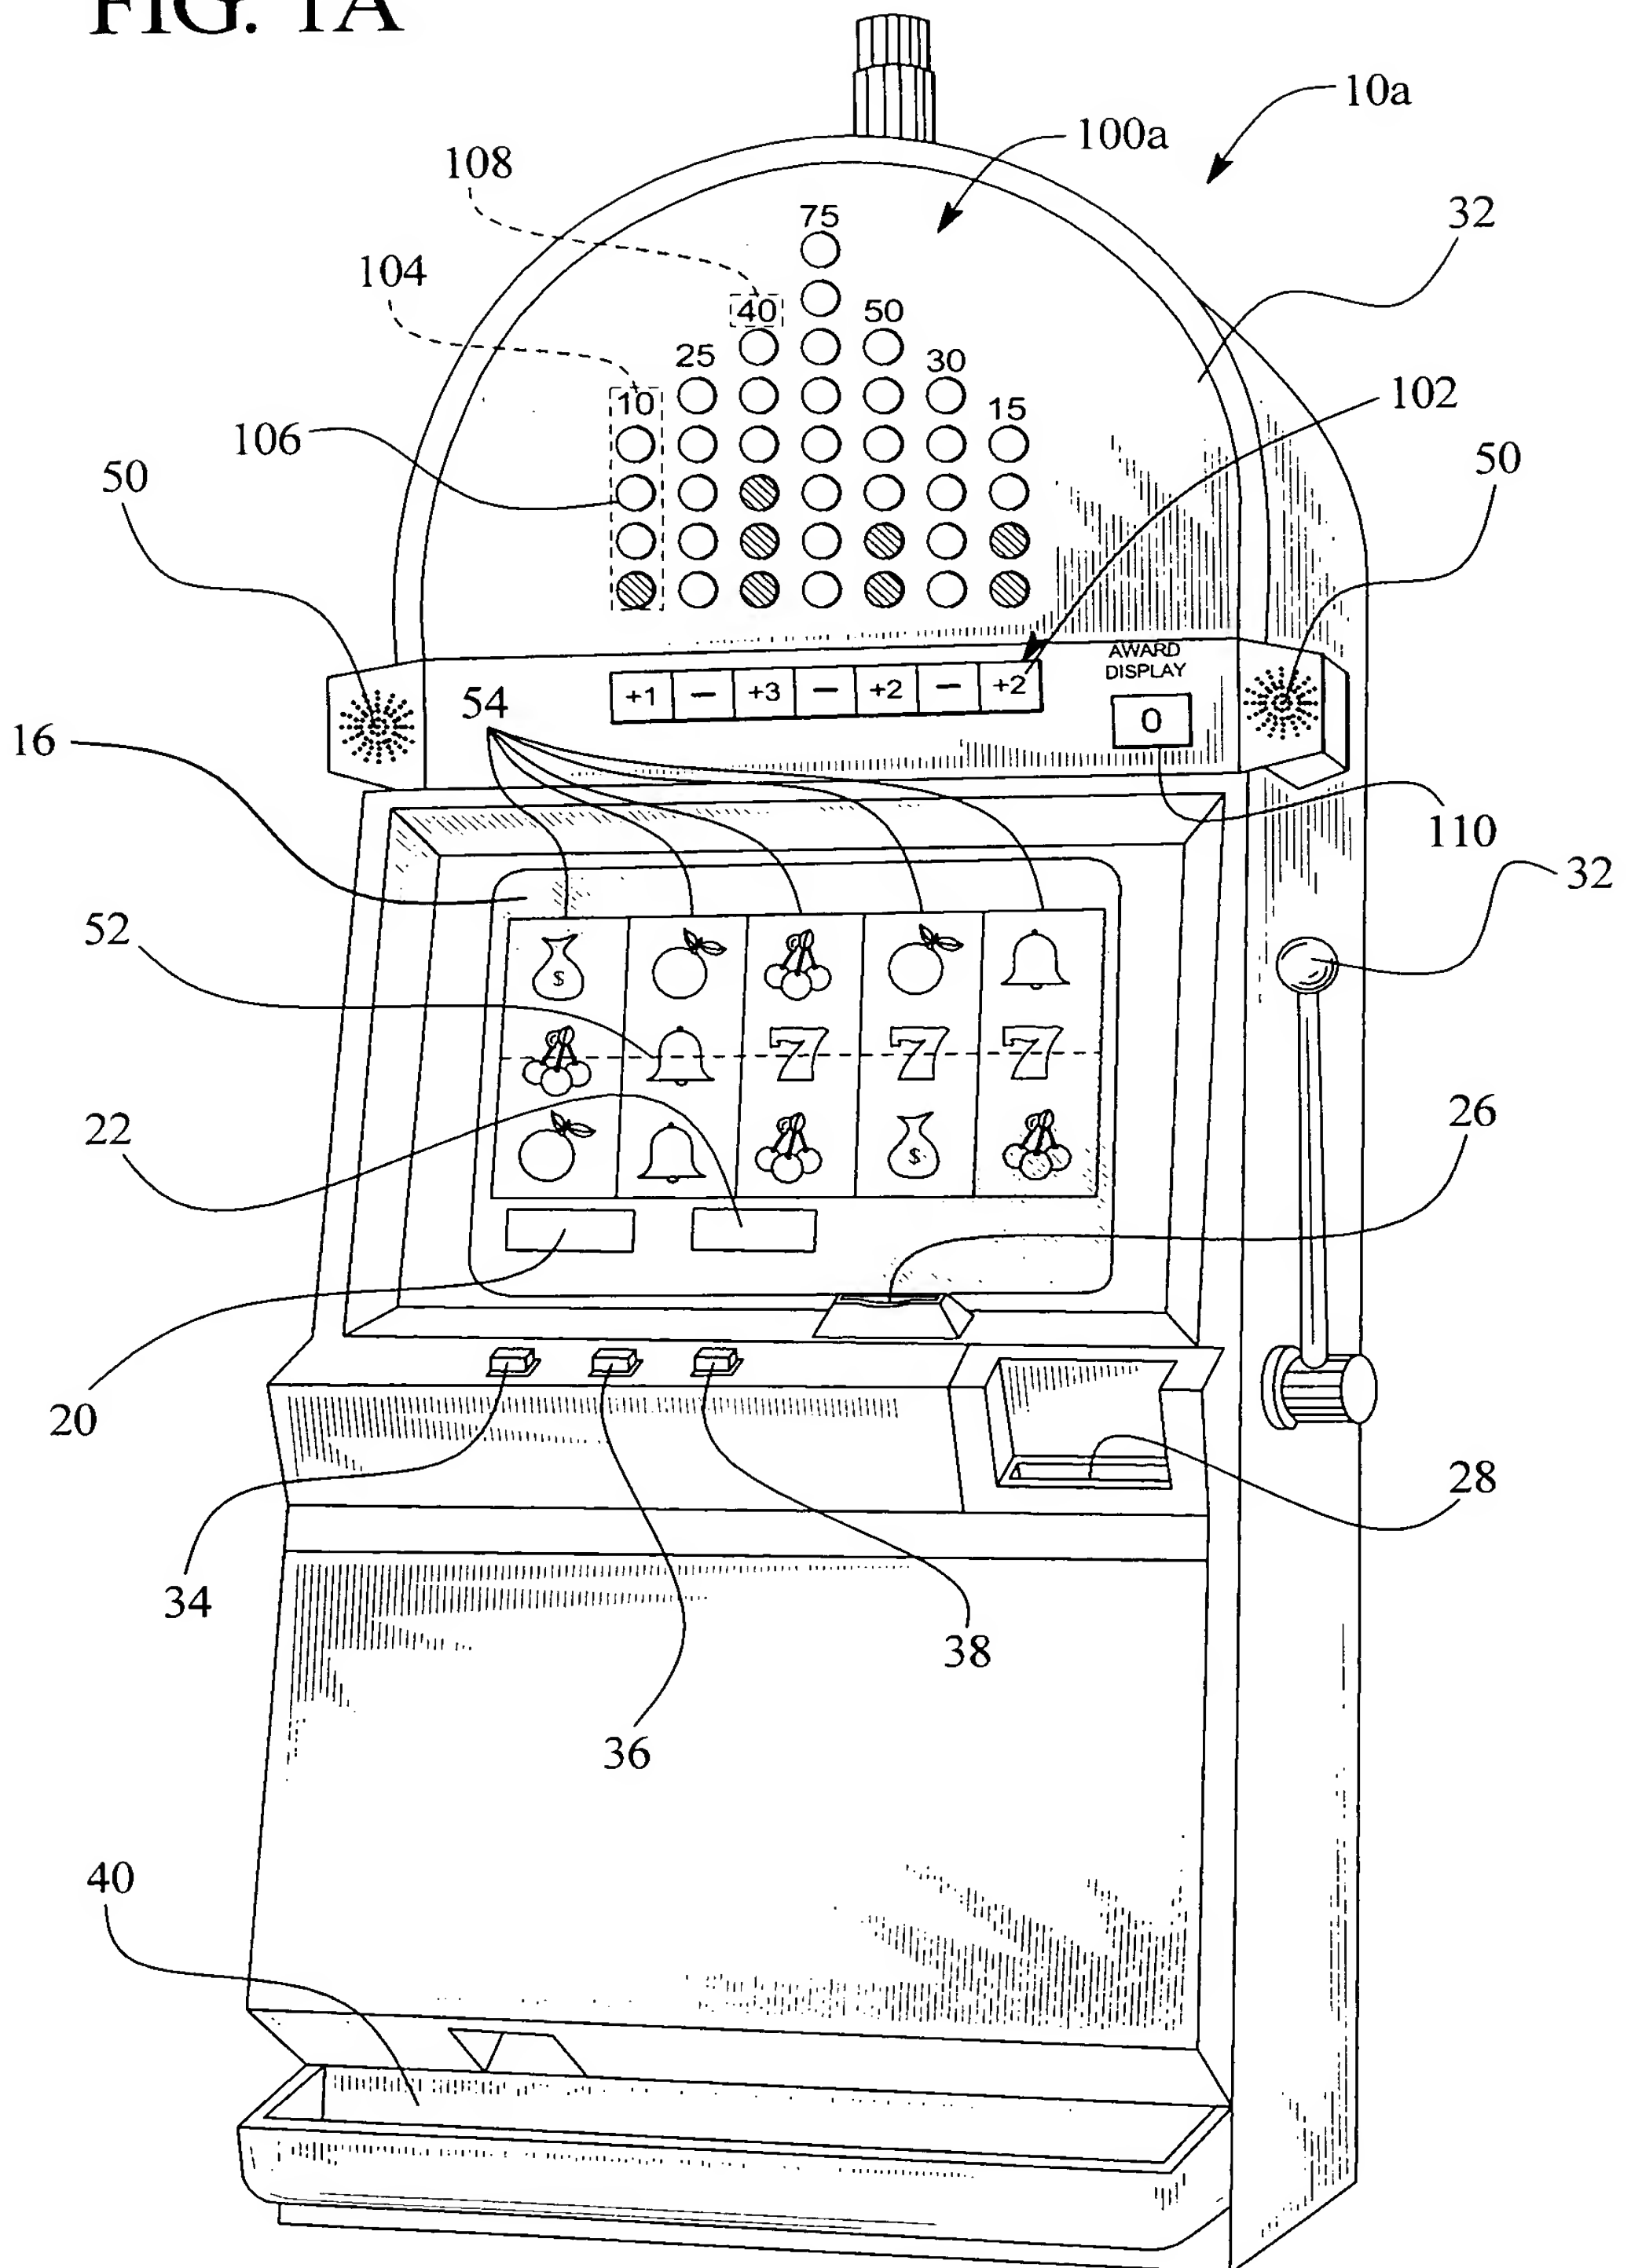 


FIG. 1B

FIG. 1B is a perspective view of a slot machine 100b. The machine includes a top display 104 showing a 5x5 grid of numbers (75, 40, 50, 30, 15, 10, 25, 10, 5, 15, 10, 5, 15, 10, 5). Below the display is a control panel 102 with an 'AWARD DISPLAY' 110 showing '0'. The main game area 16 contains a 3x5 grid of symbols (s, 7, 7, 7, 7, 7, 7, 7, 7, 7, 7, 7, 7, 7, 7). The machine has a coin slot 20, a coin return button 26, and a coin tray 40. The side panel 108 is shown in a dashed line.

FIG. 2A

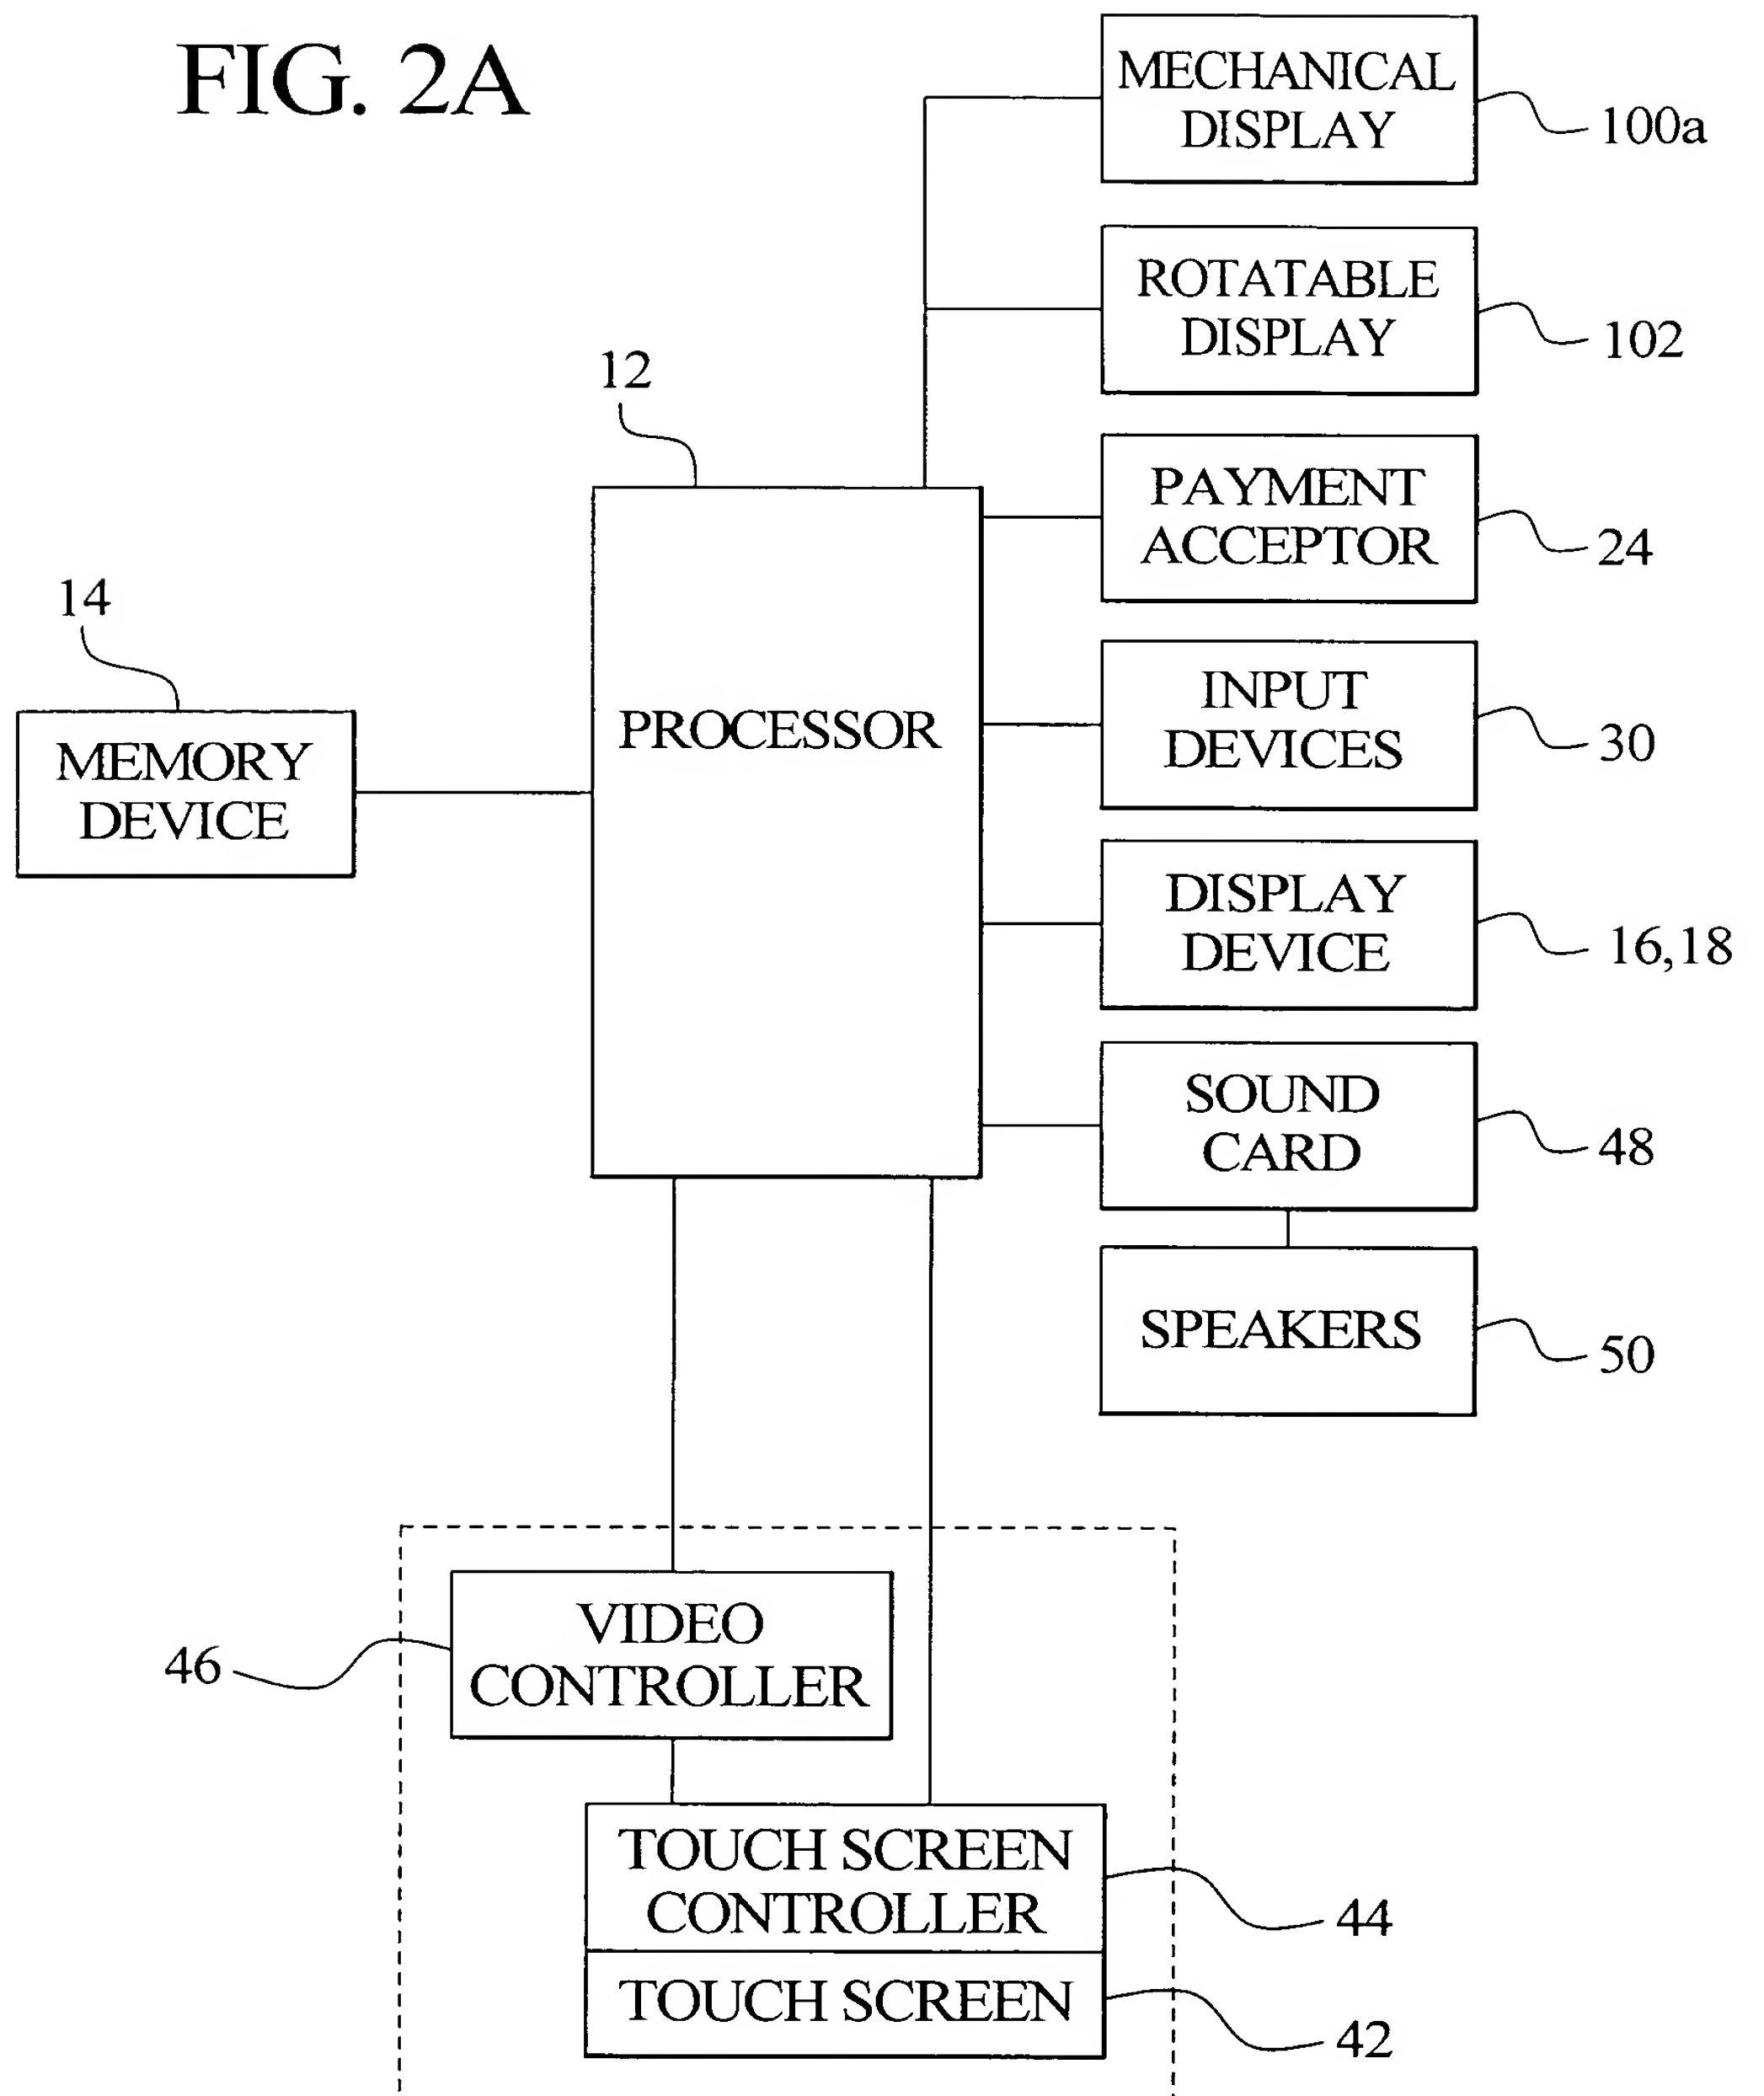 


FIG. 2B

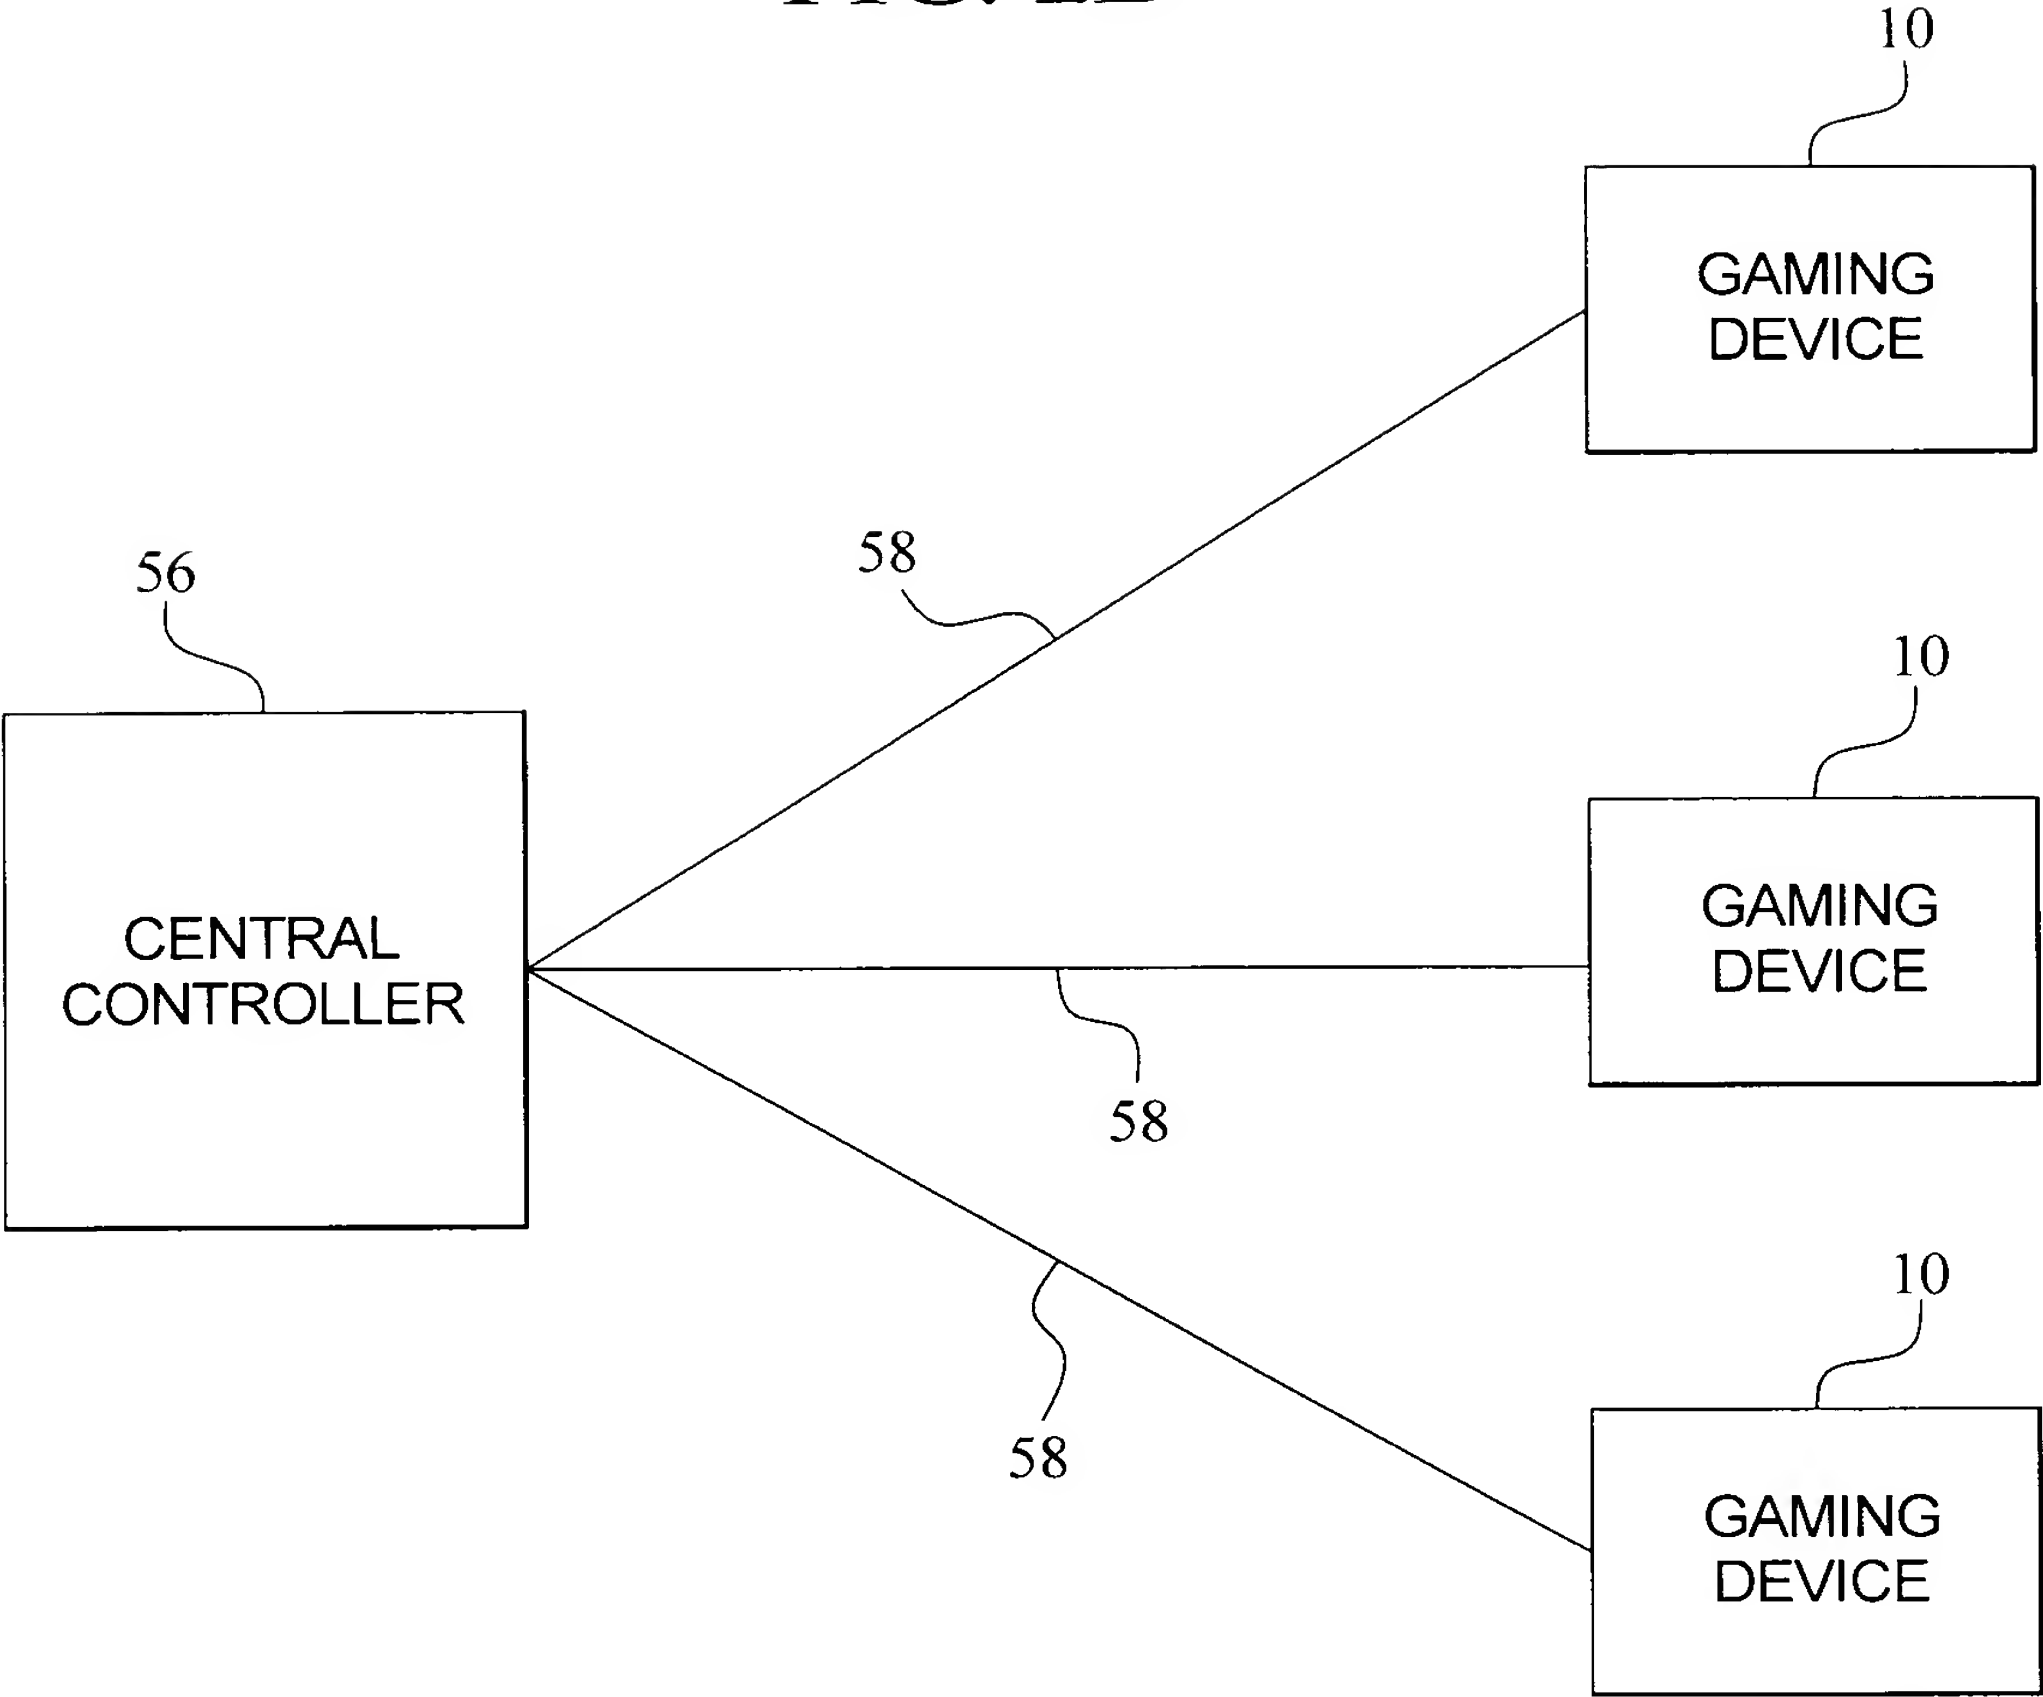 


FIG. 3A

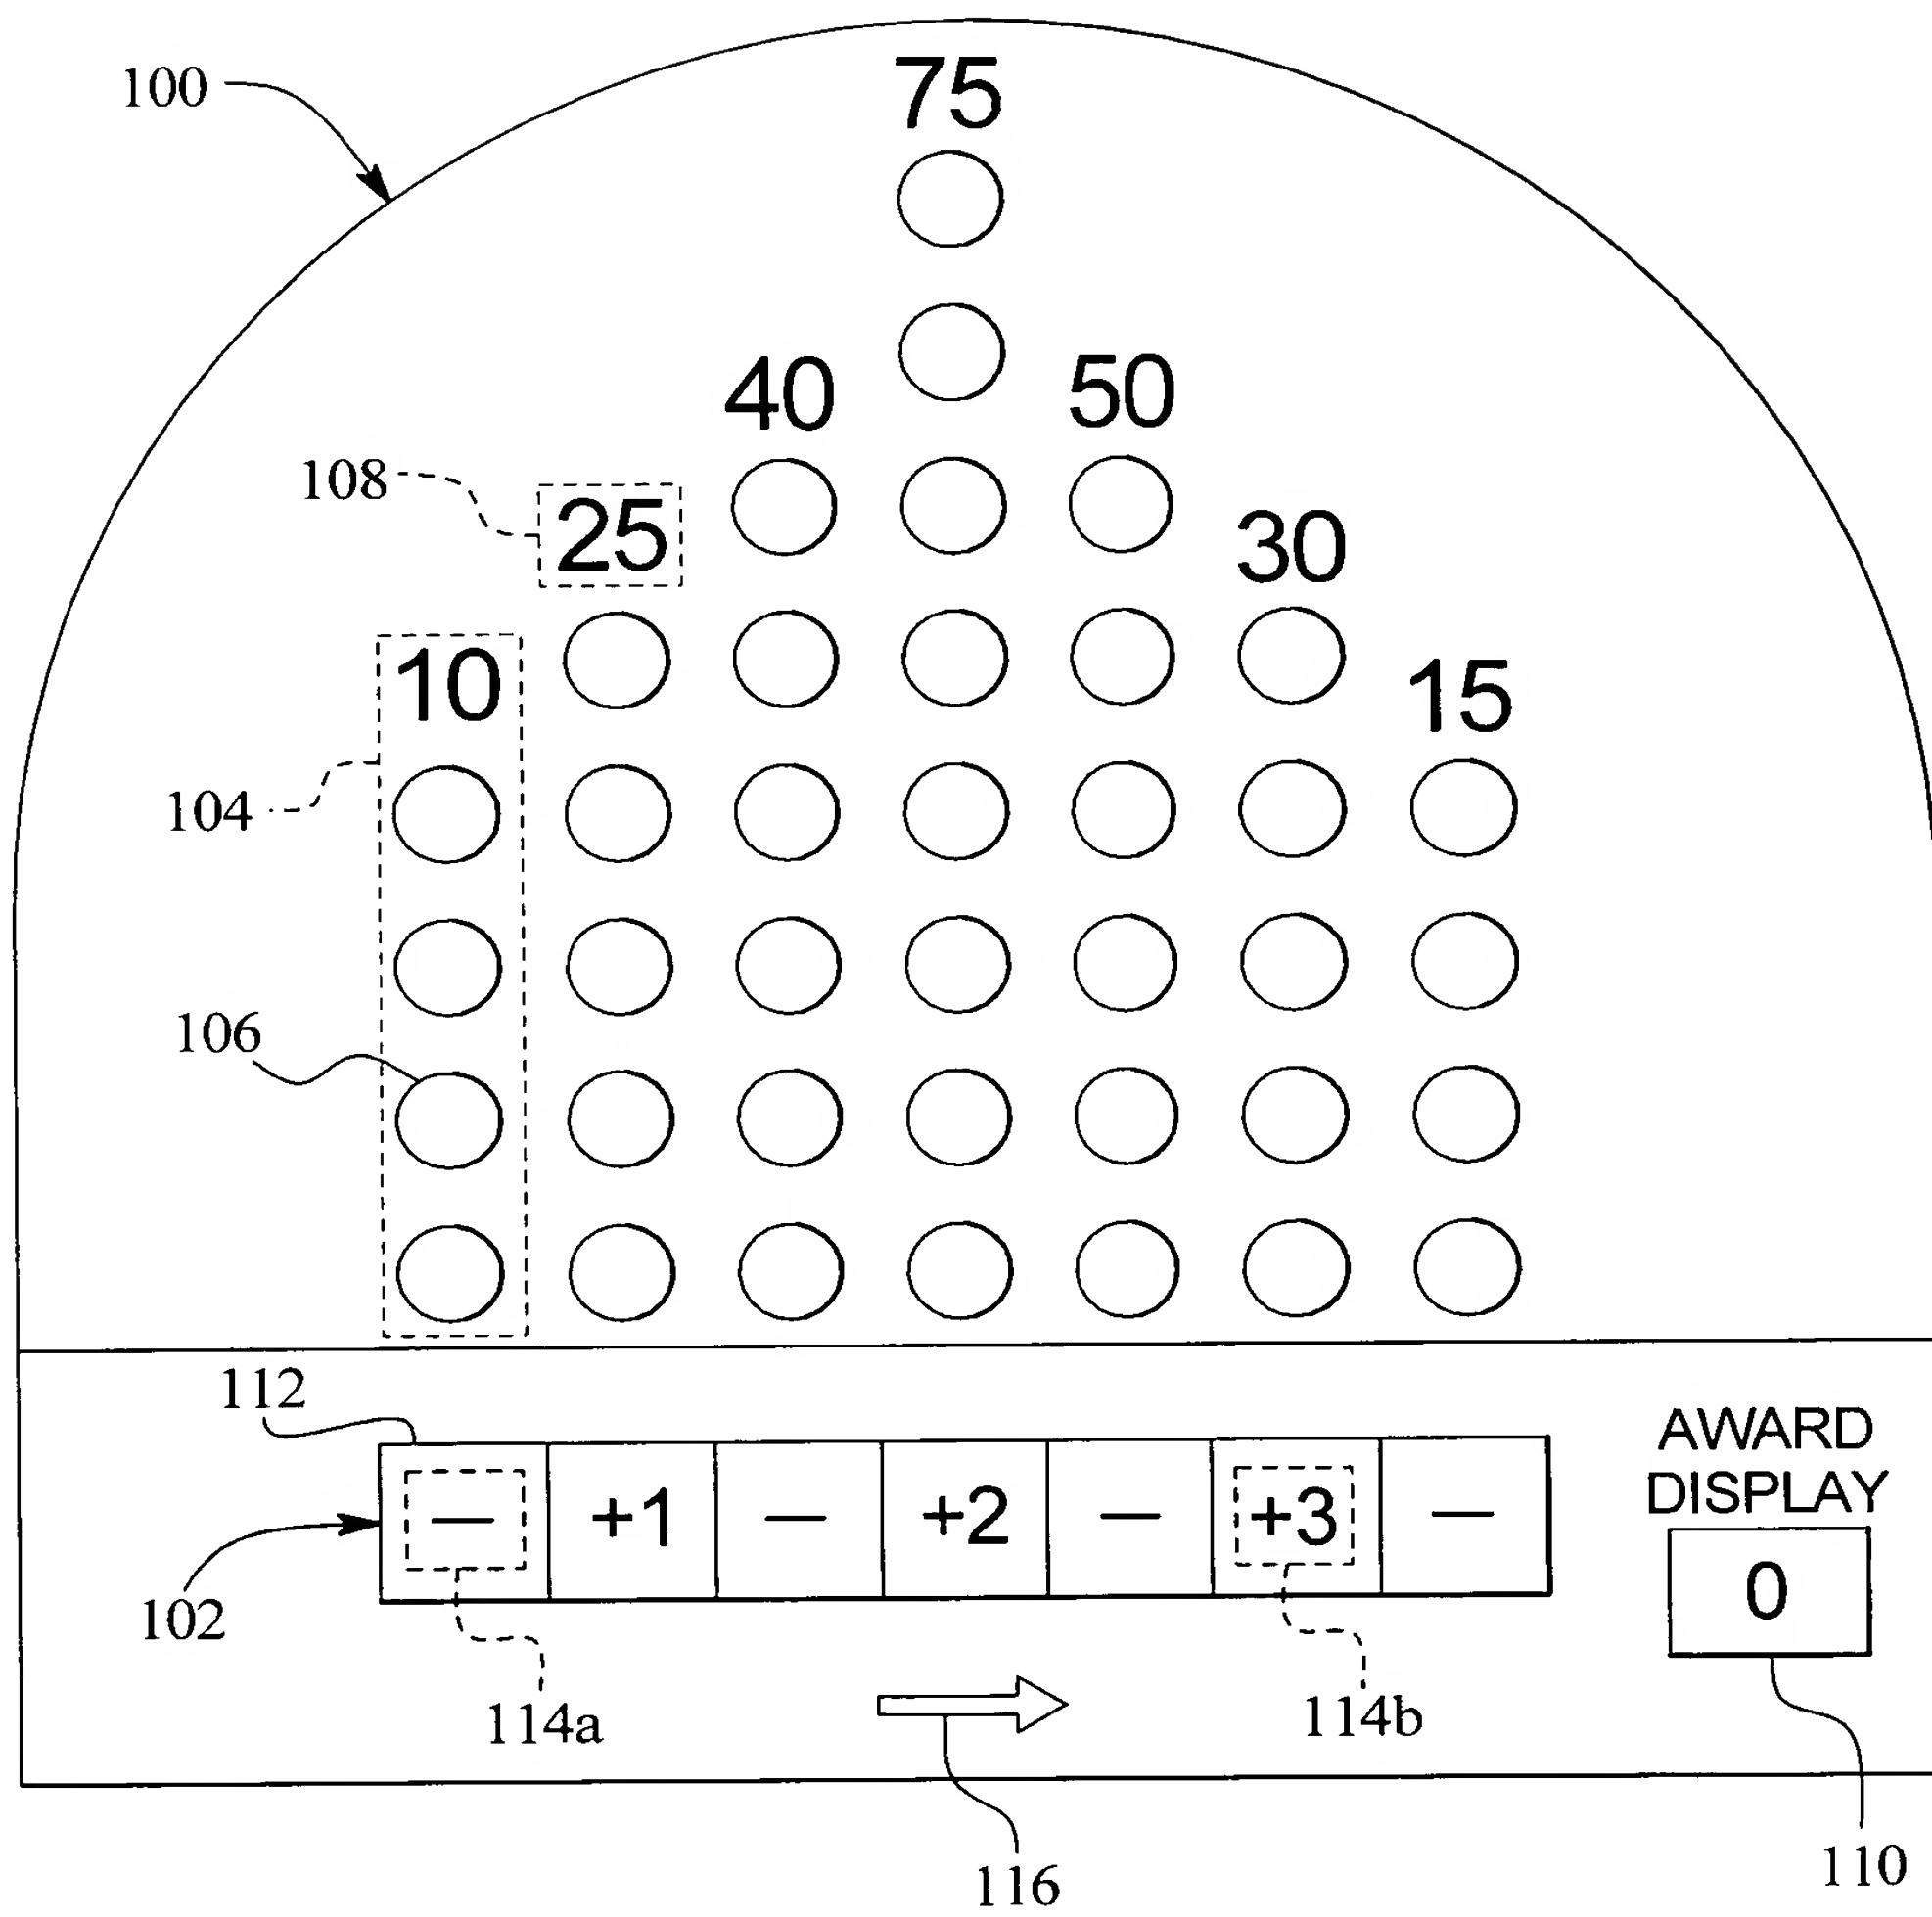 


FIG. 3B

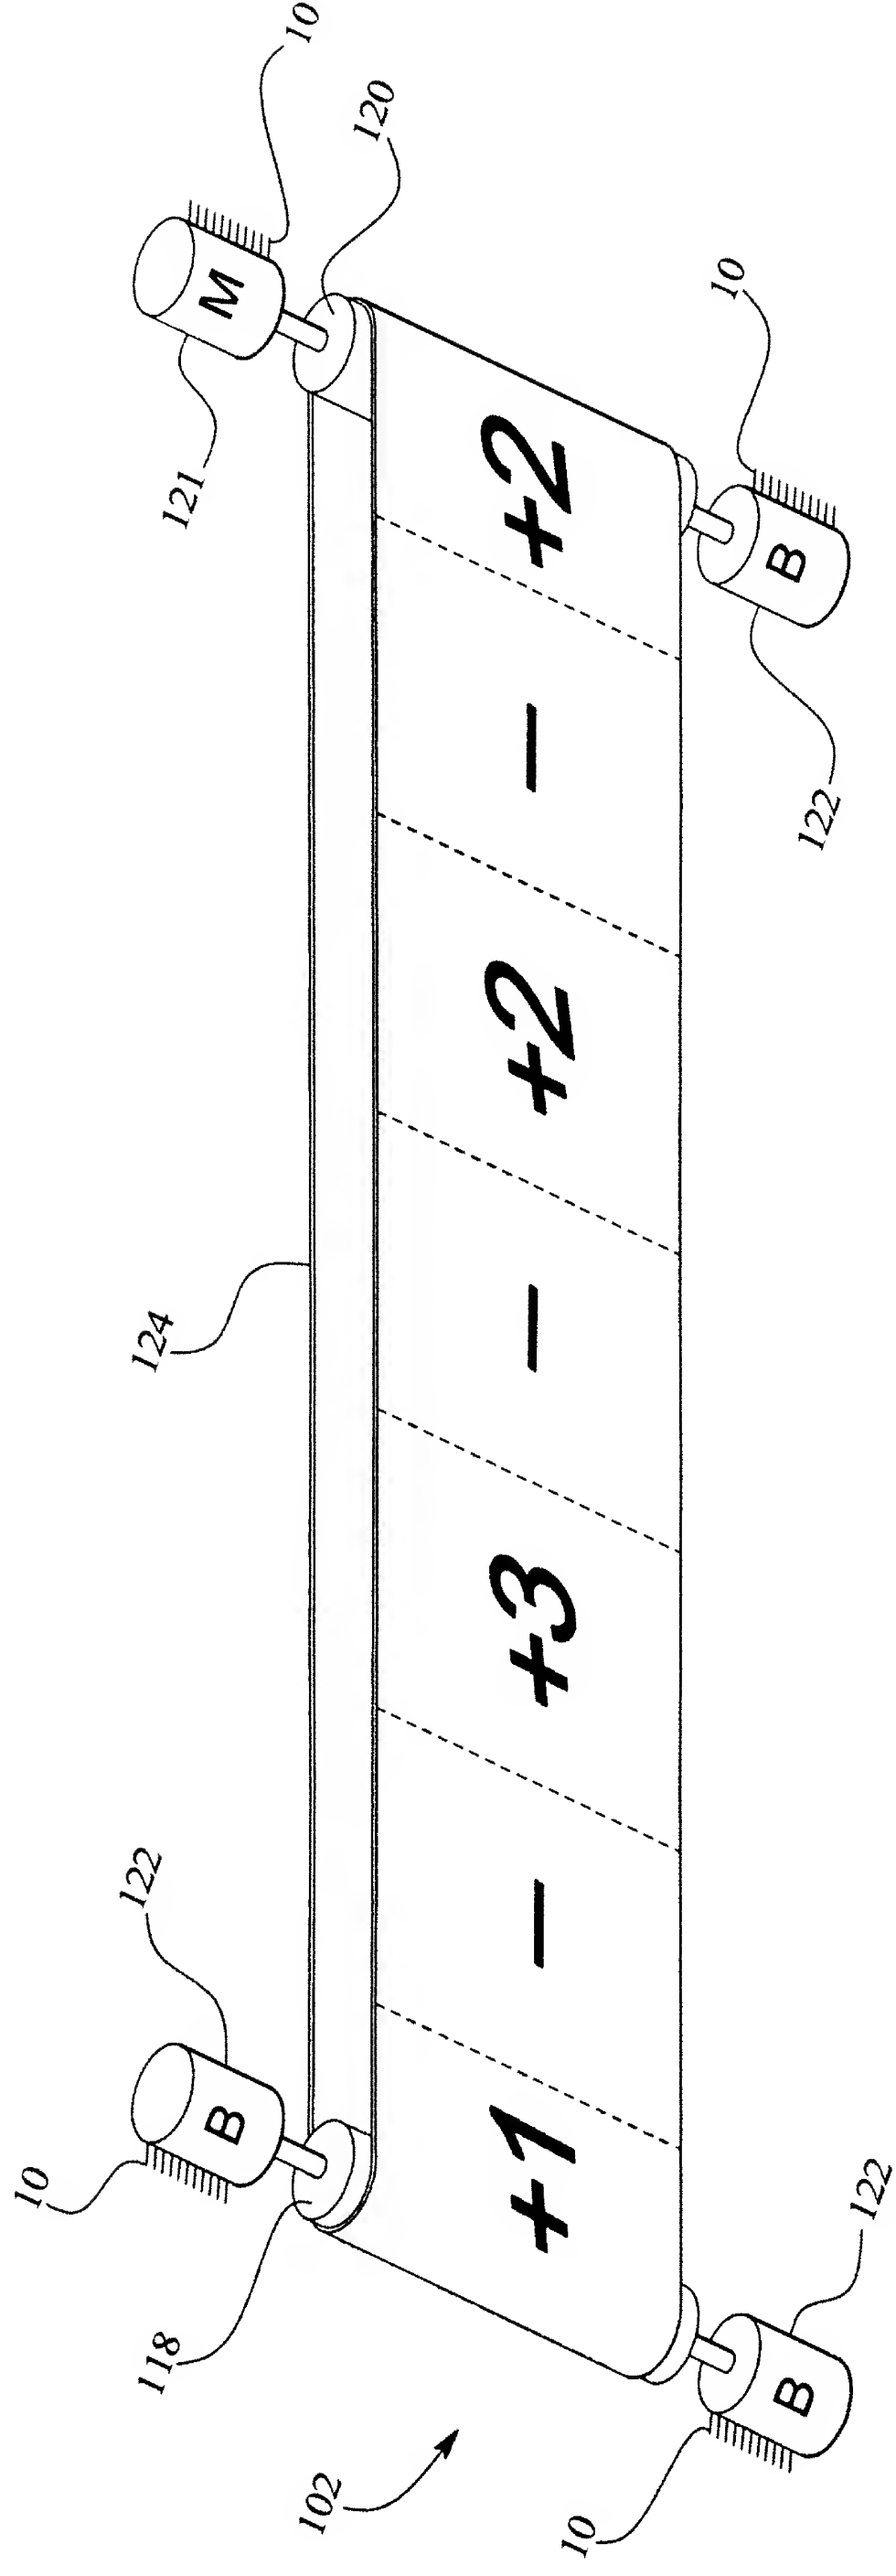 


FIG. 4A

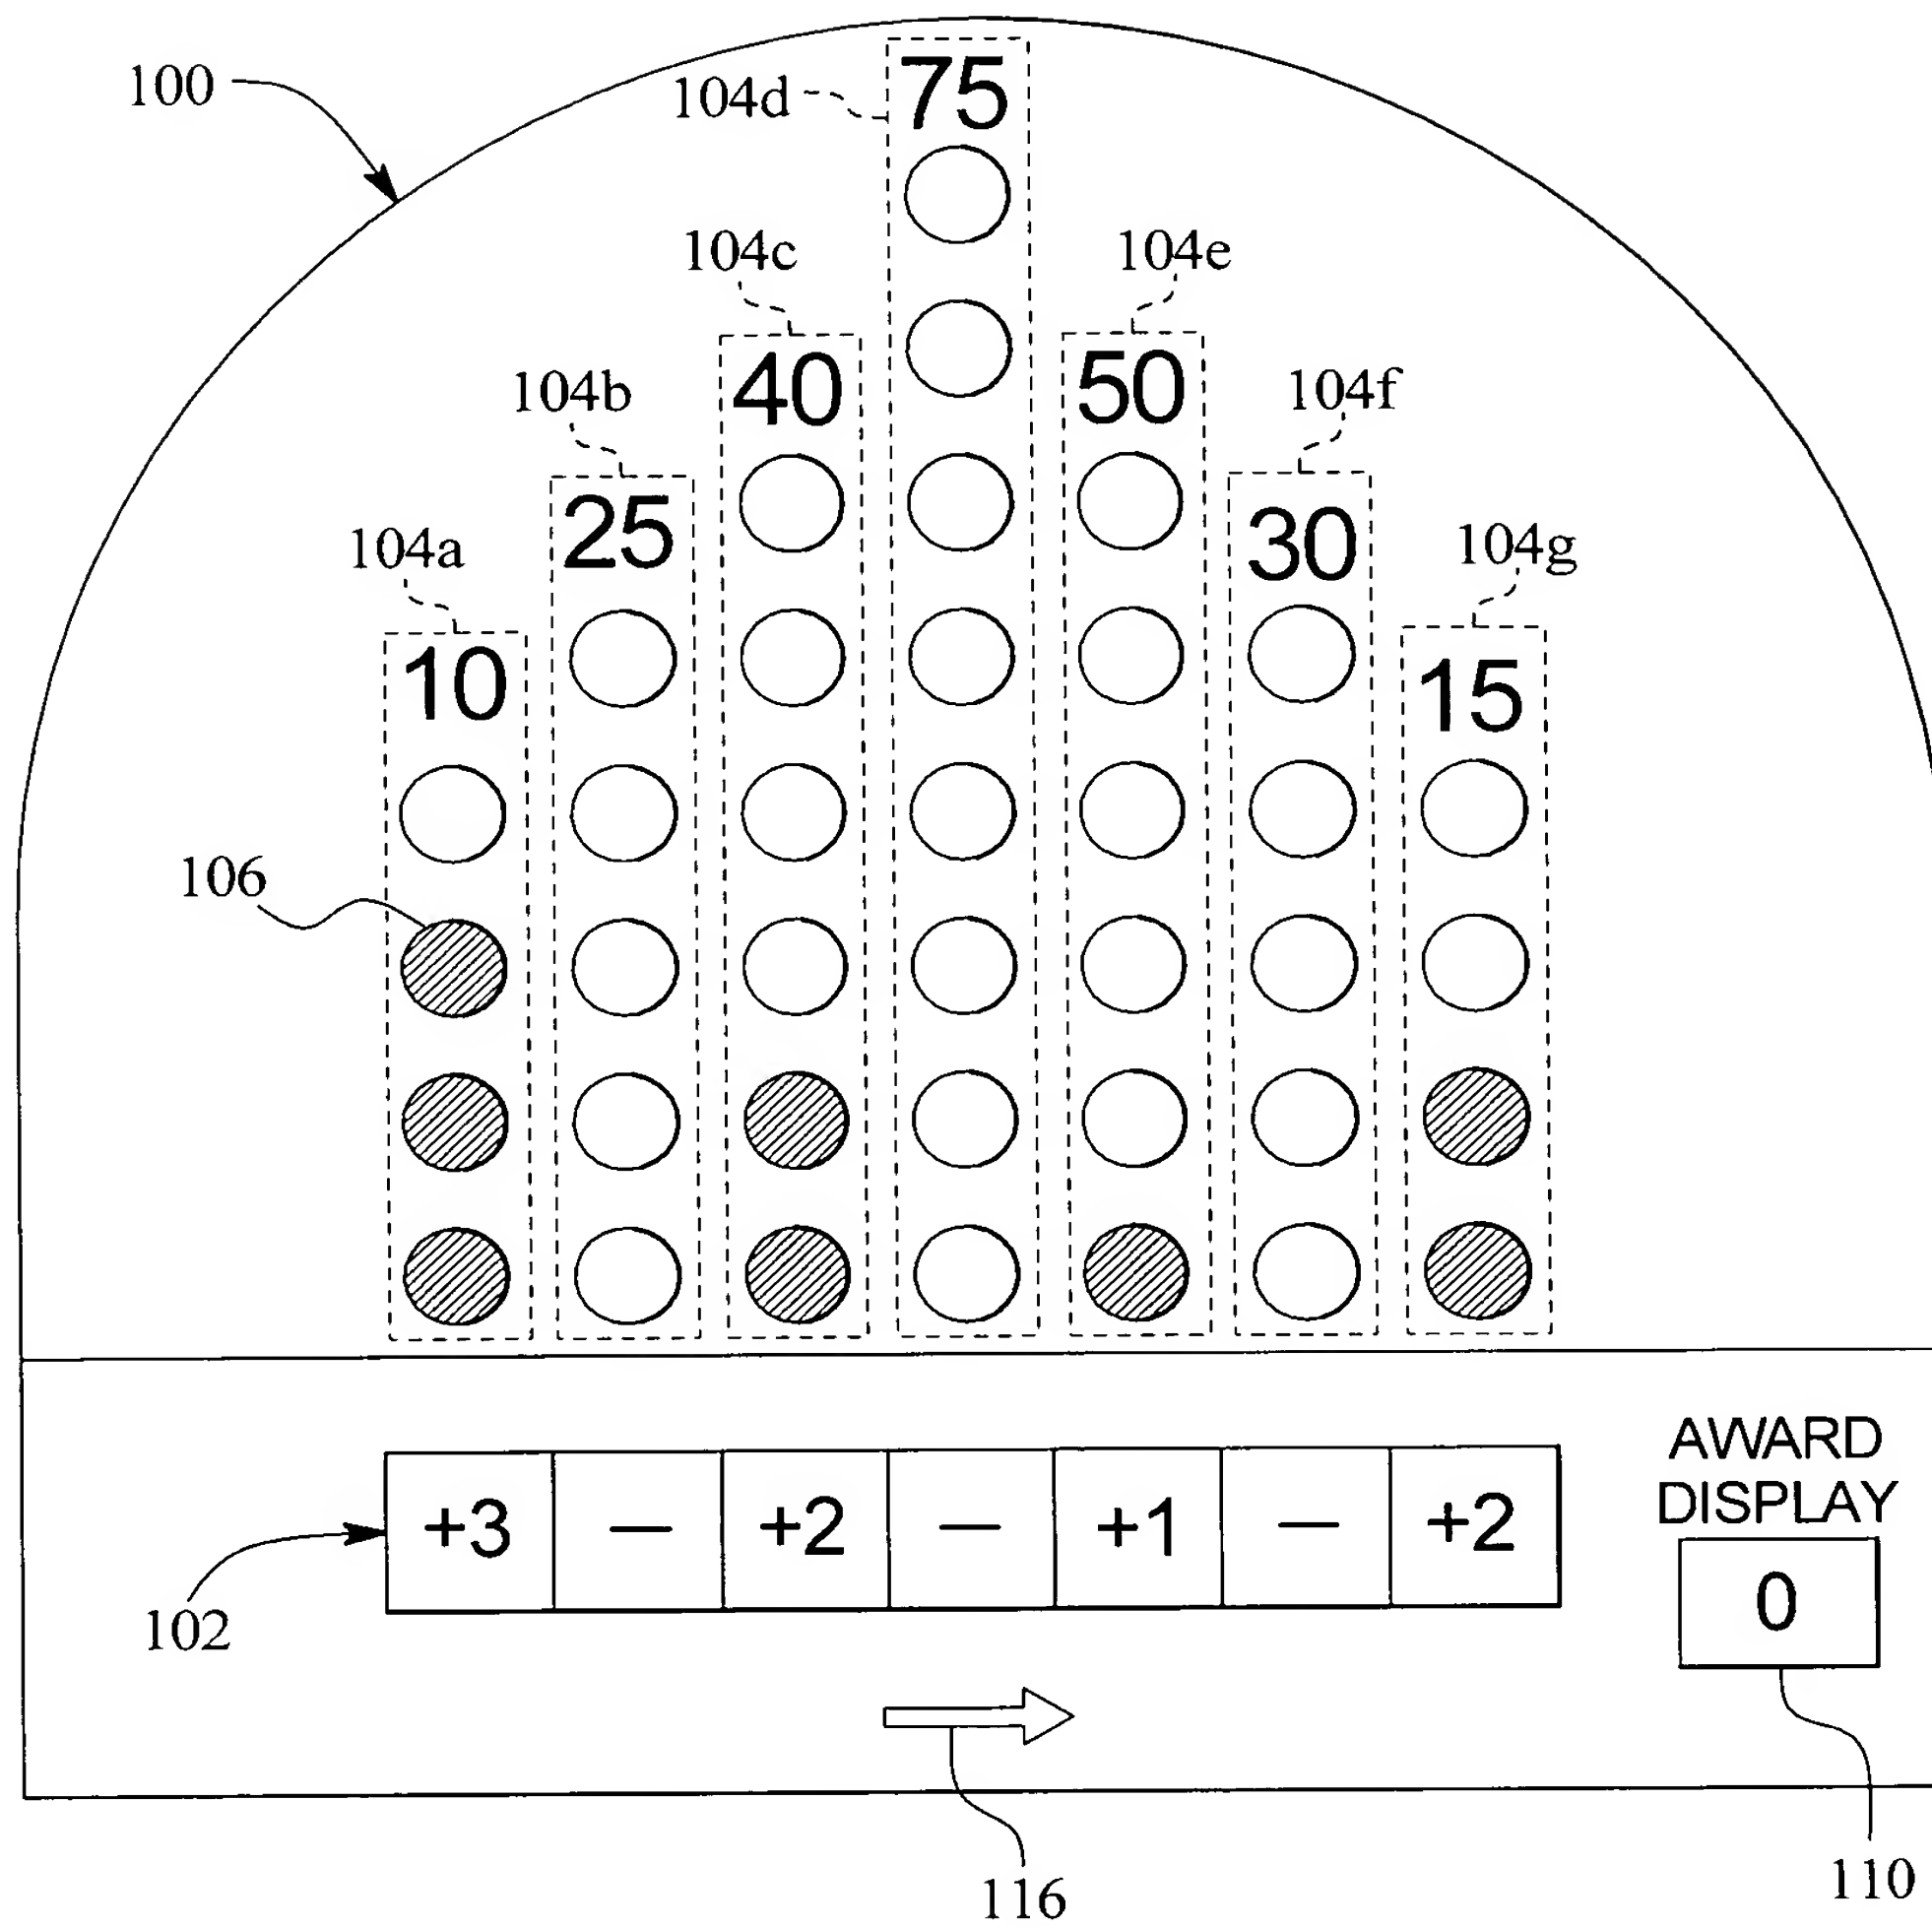 


FIG. 4B

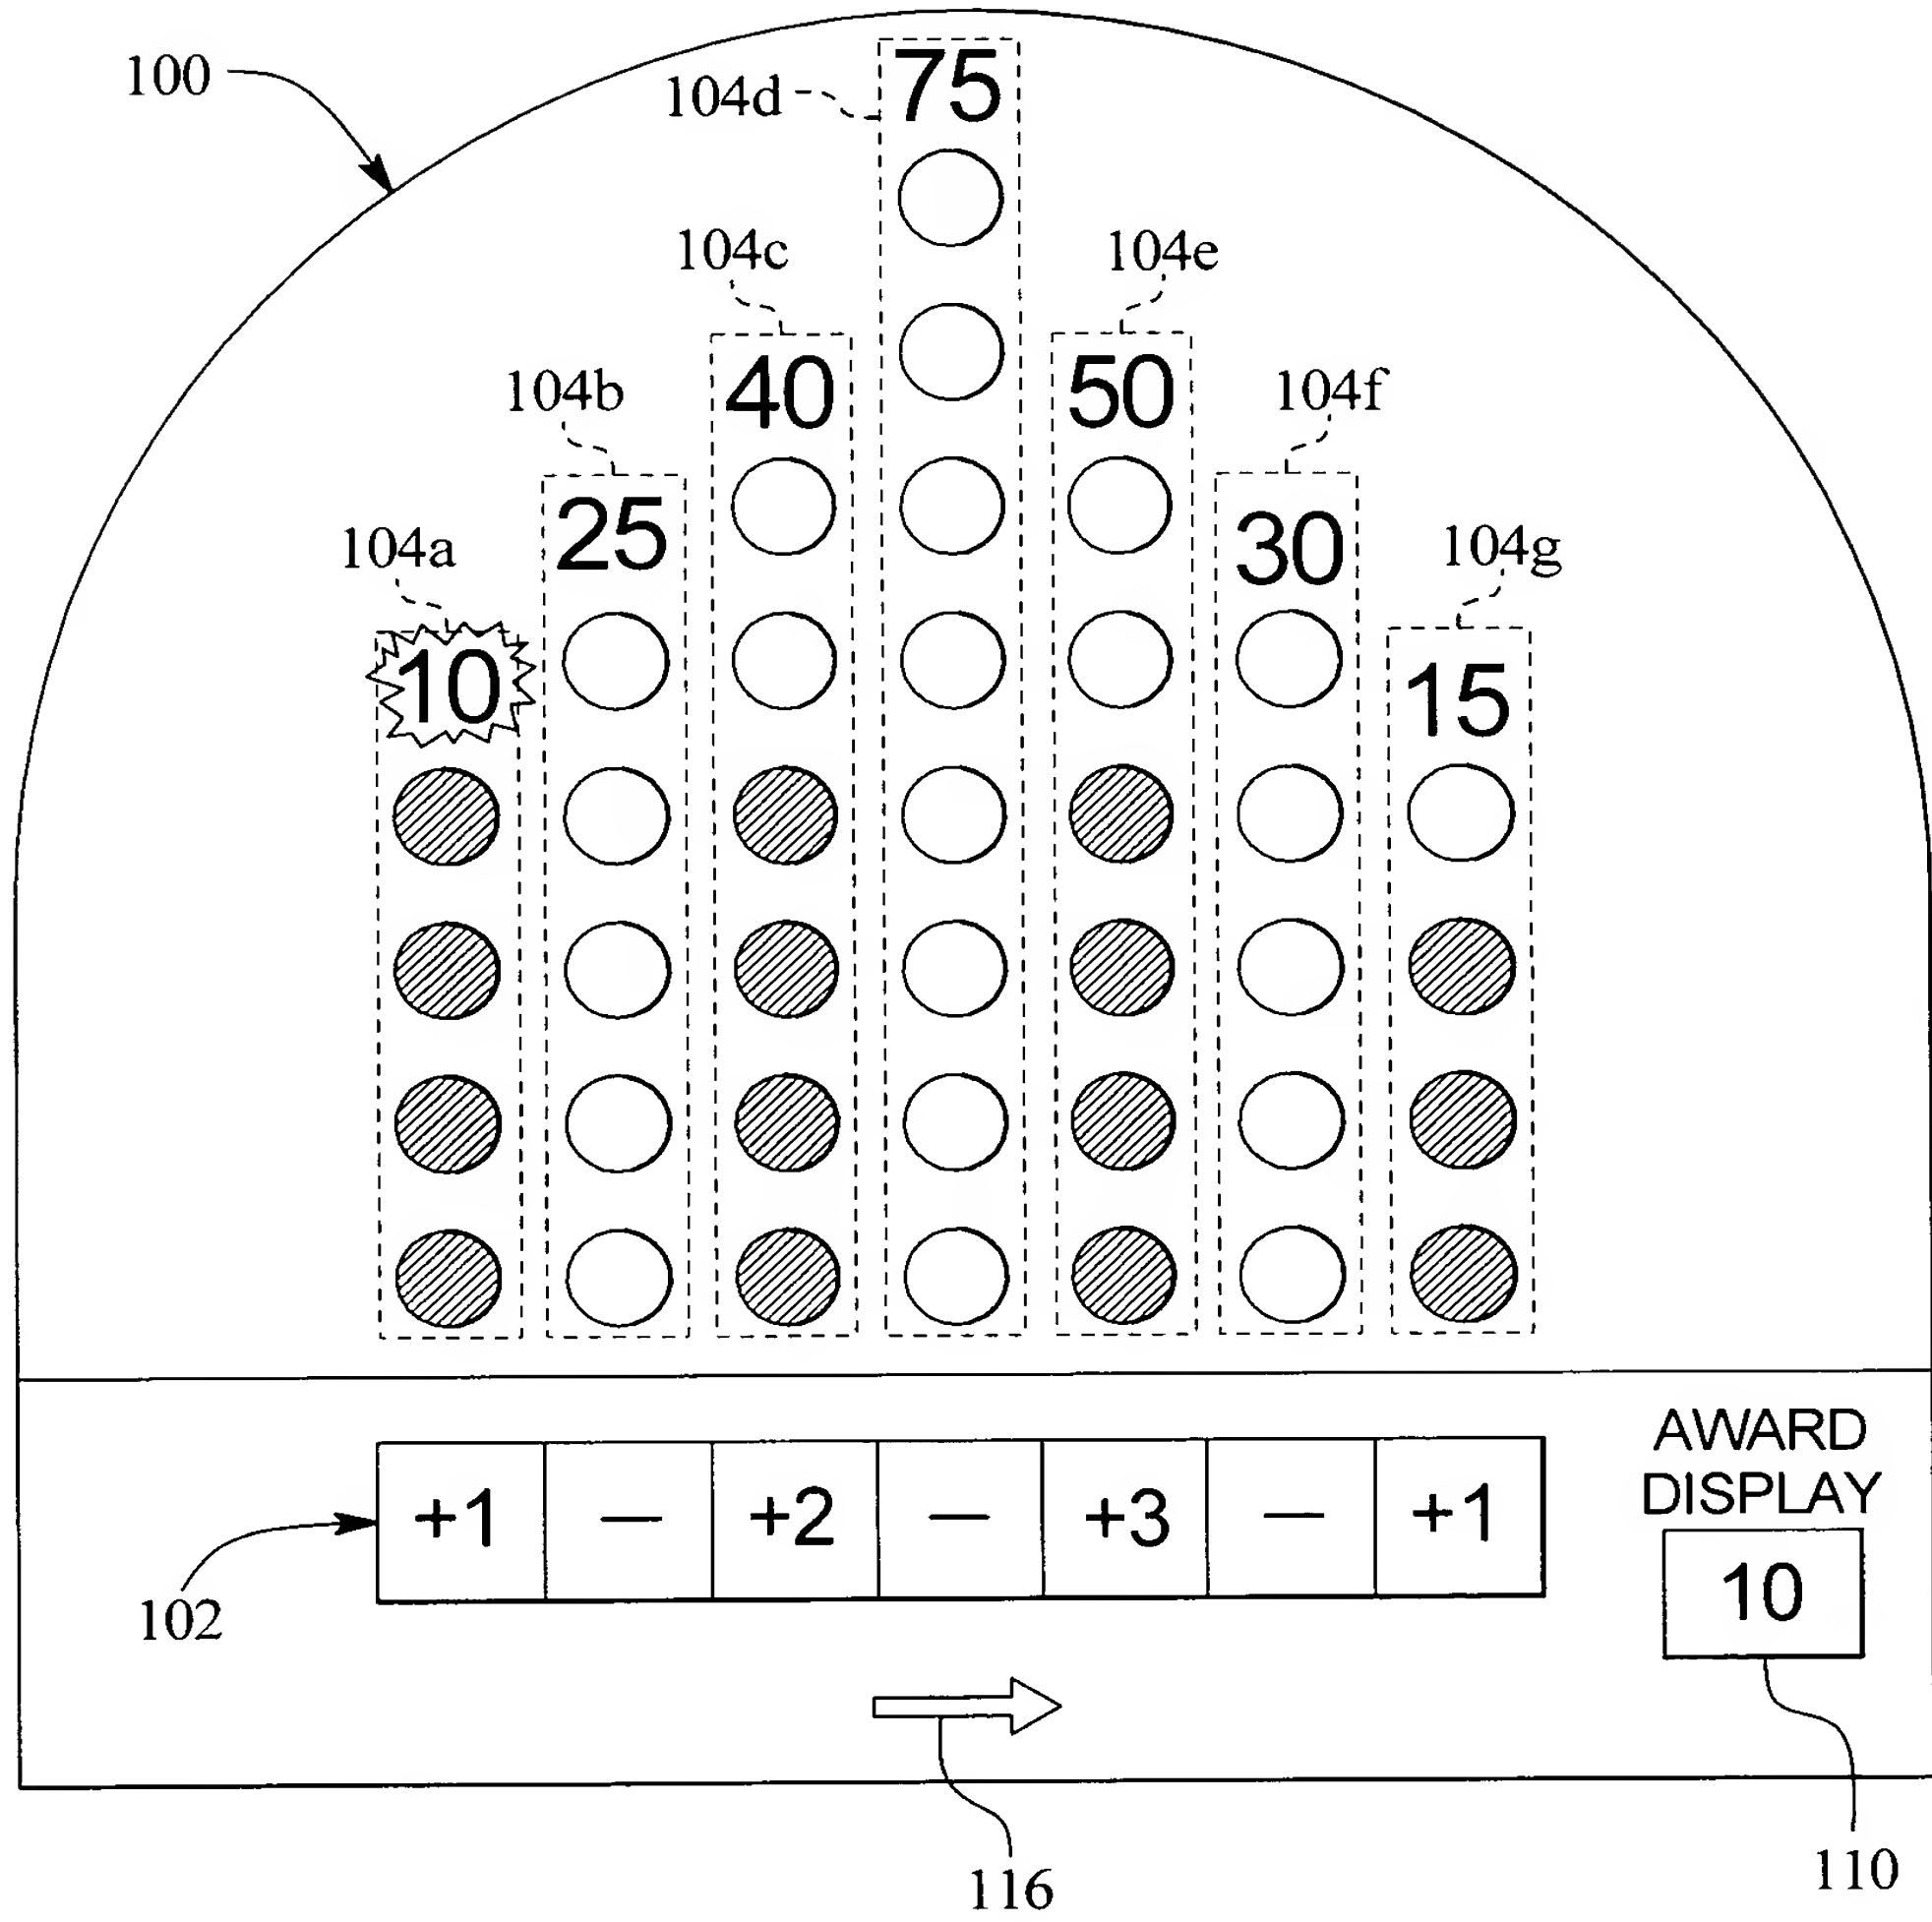 


FIG. 4C

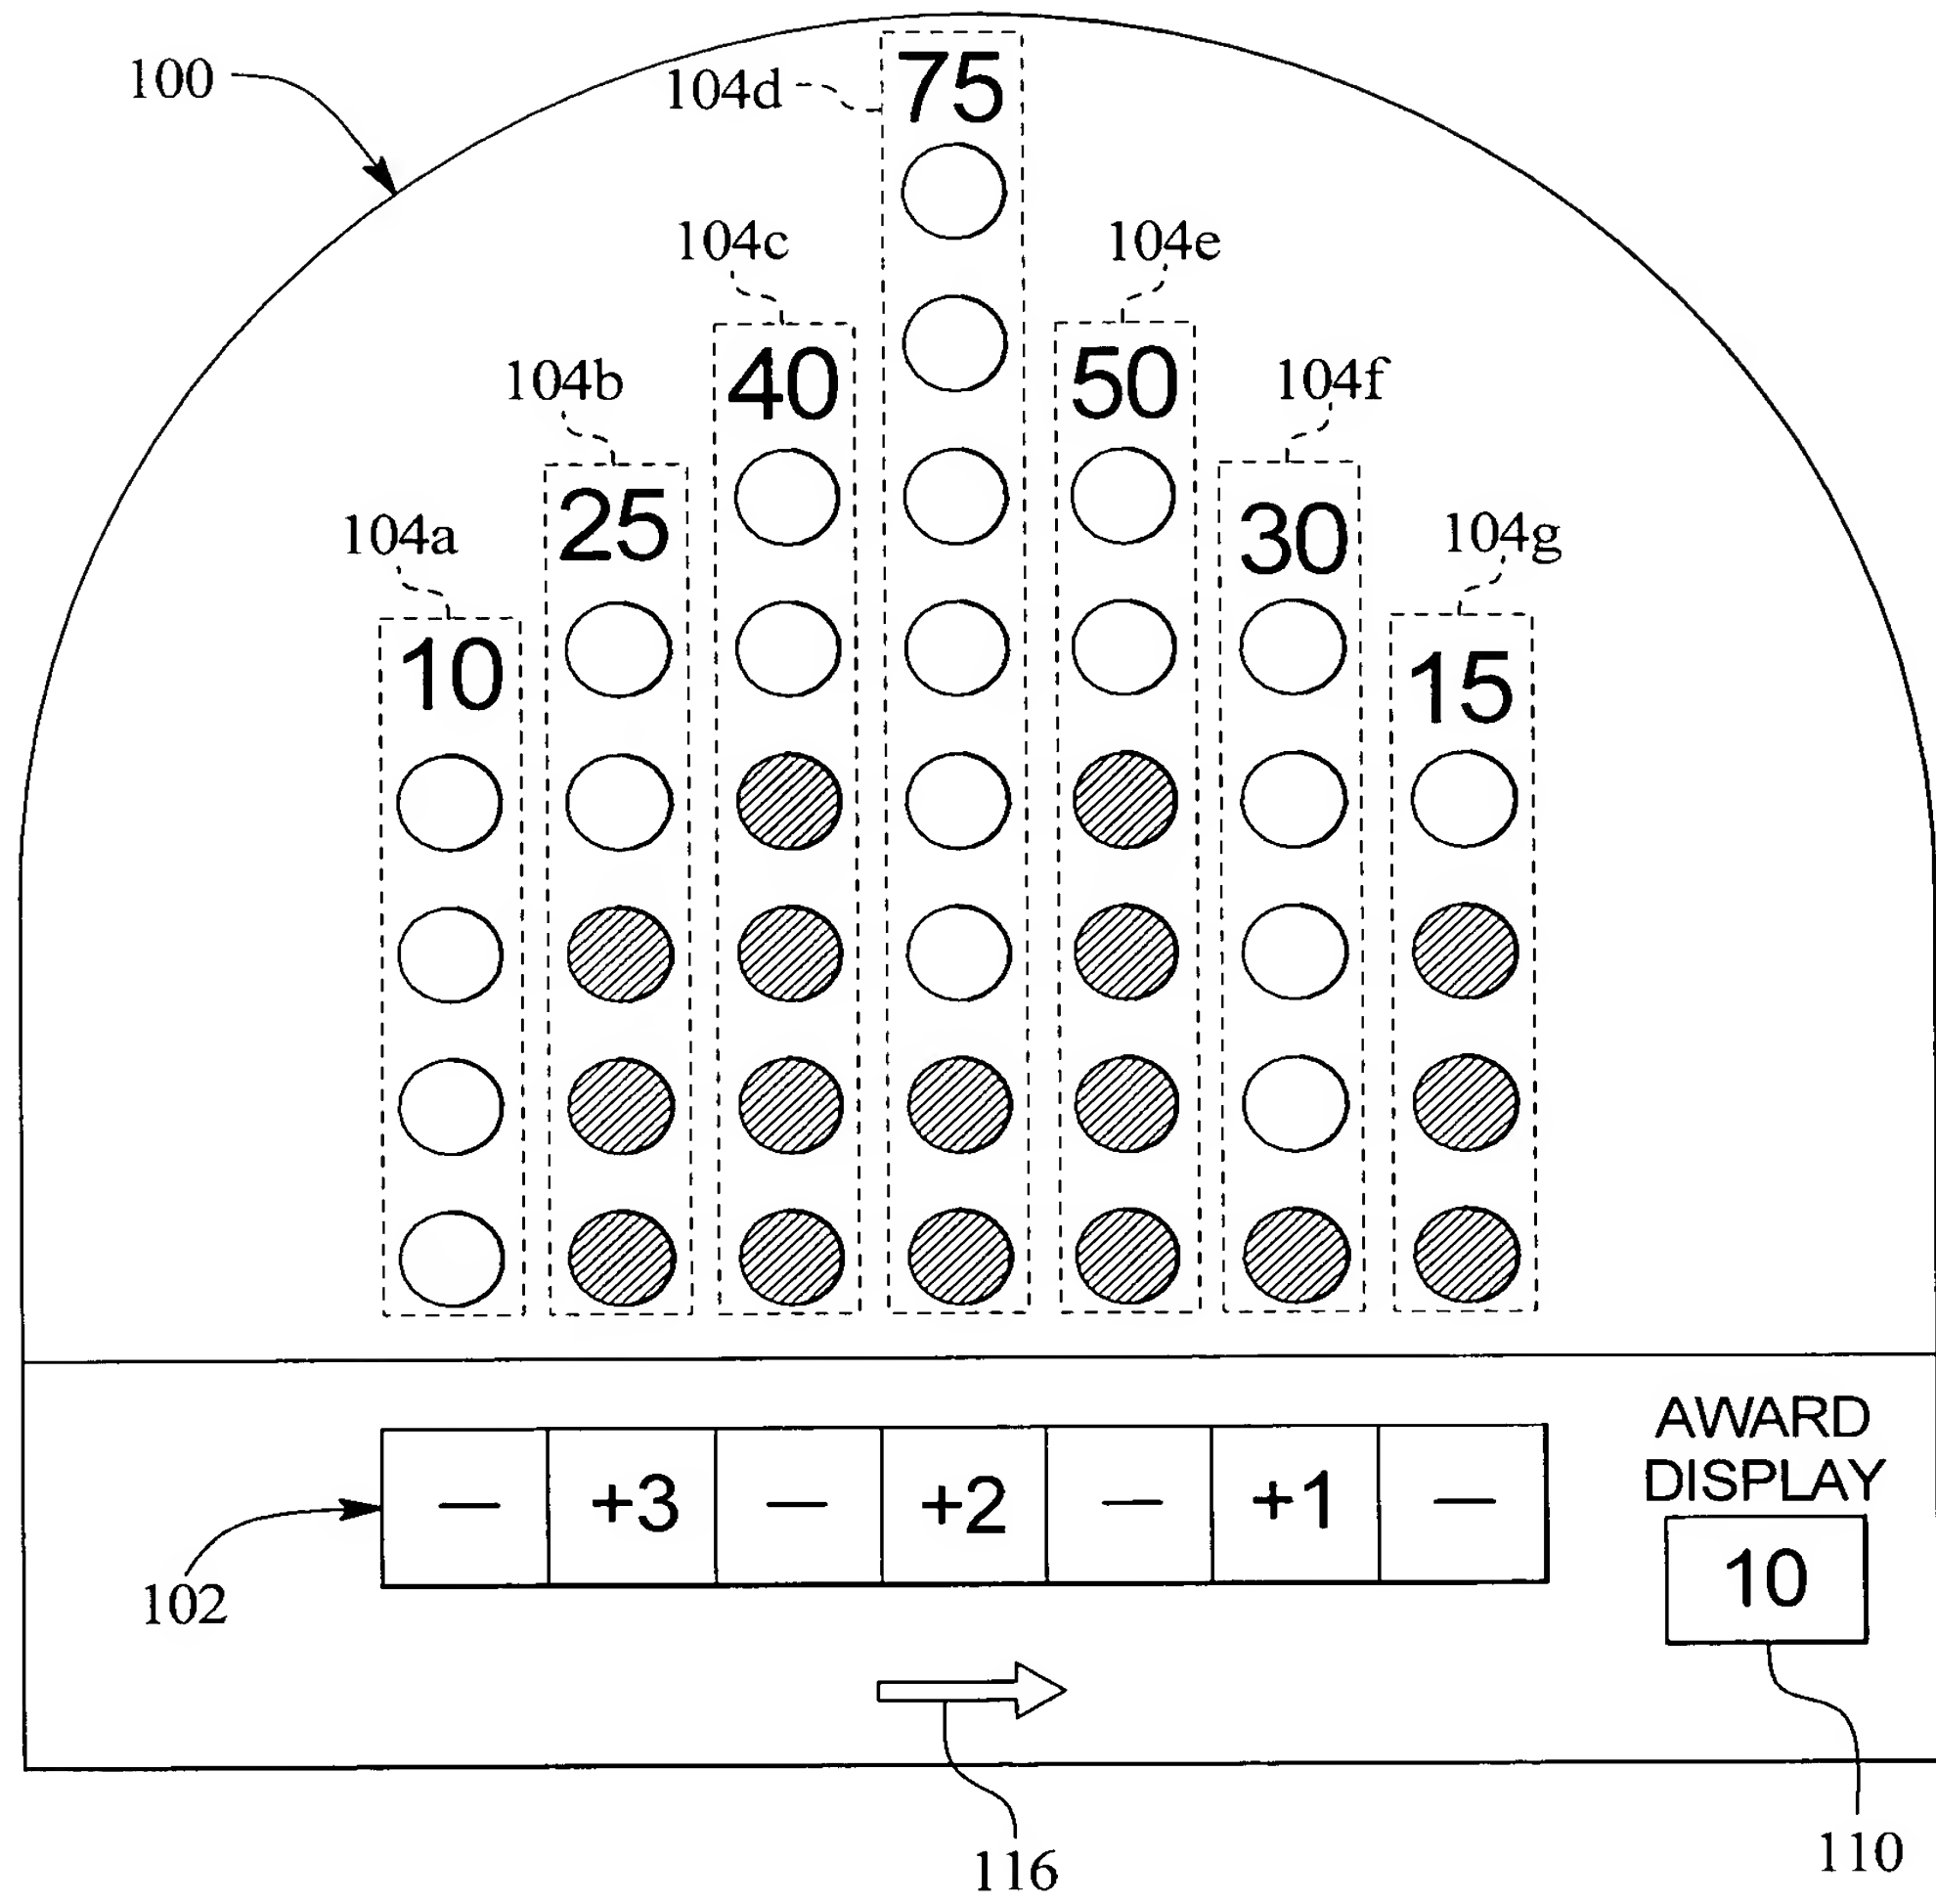 


FIG. 4D

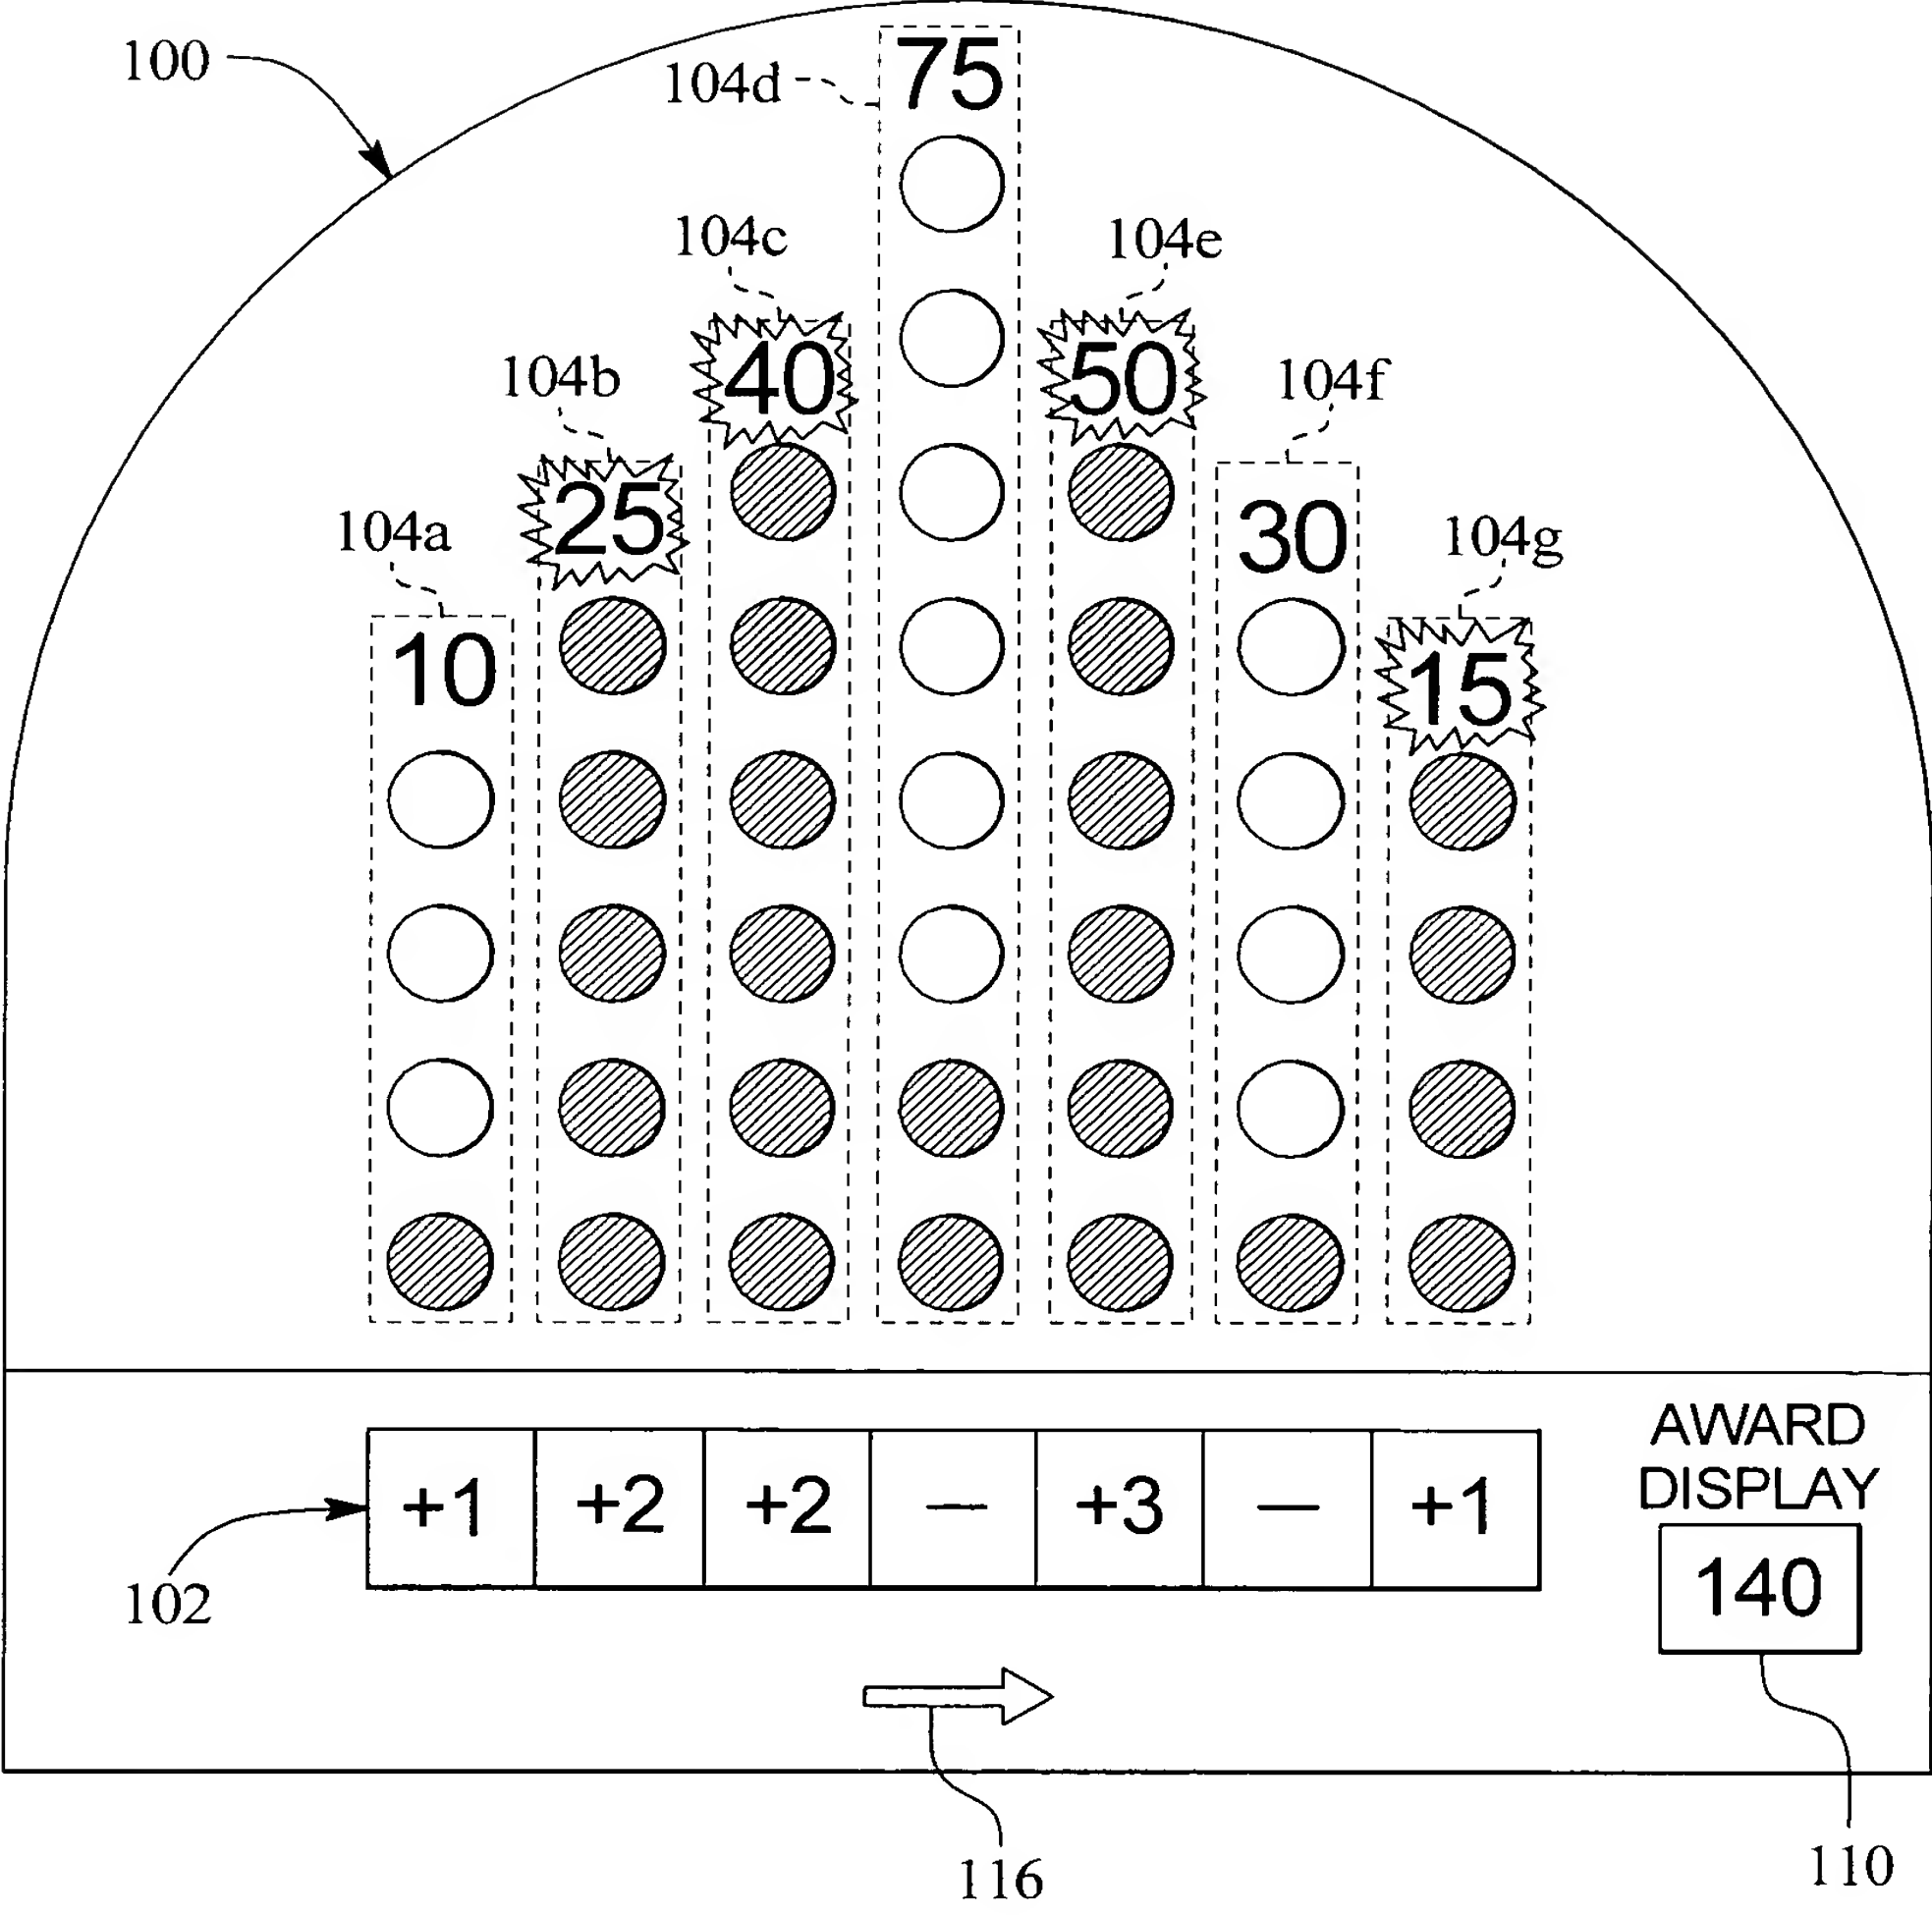 


FIG. 5A

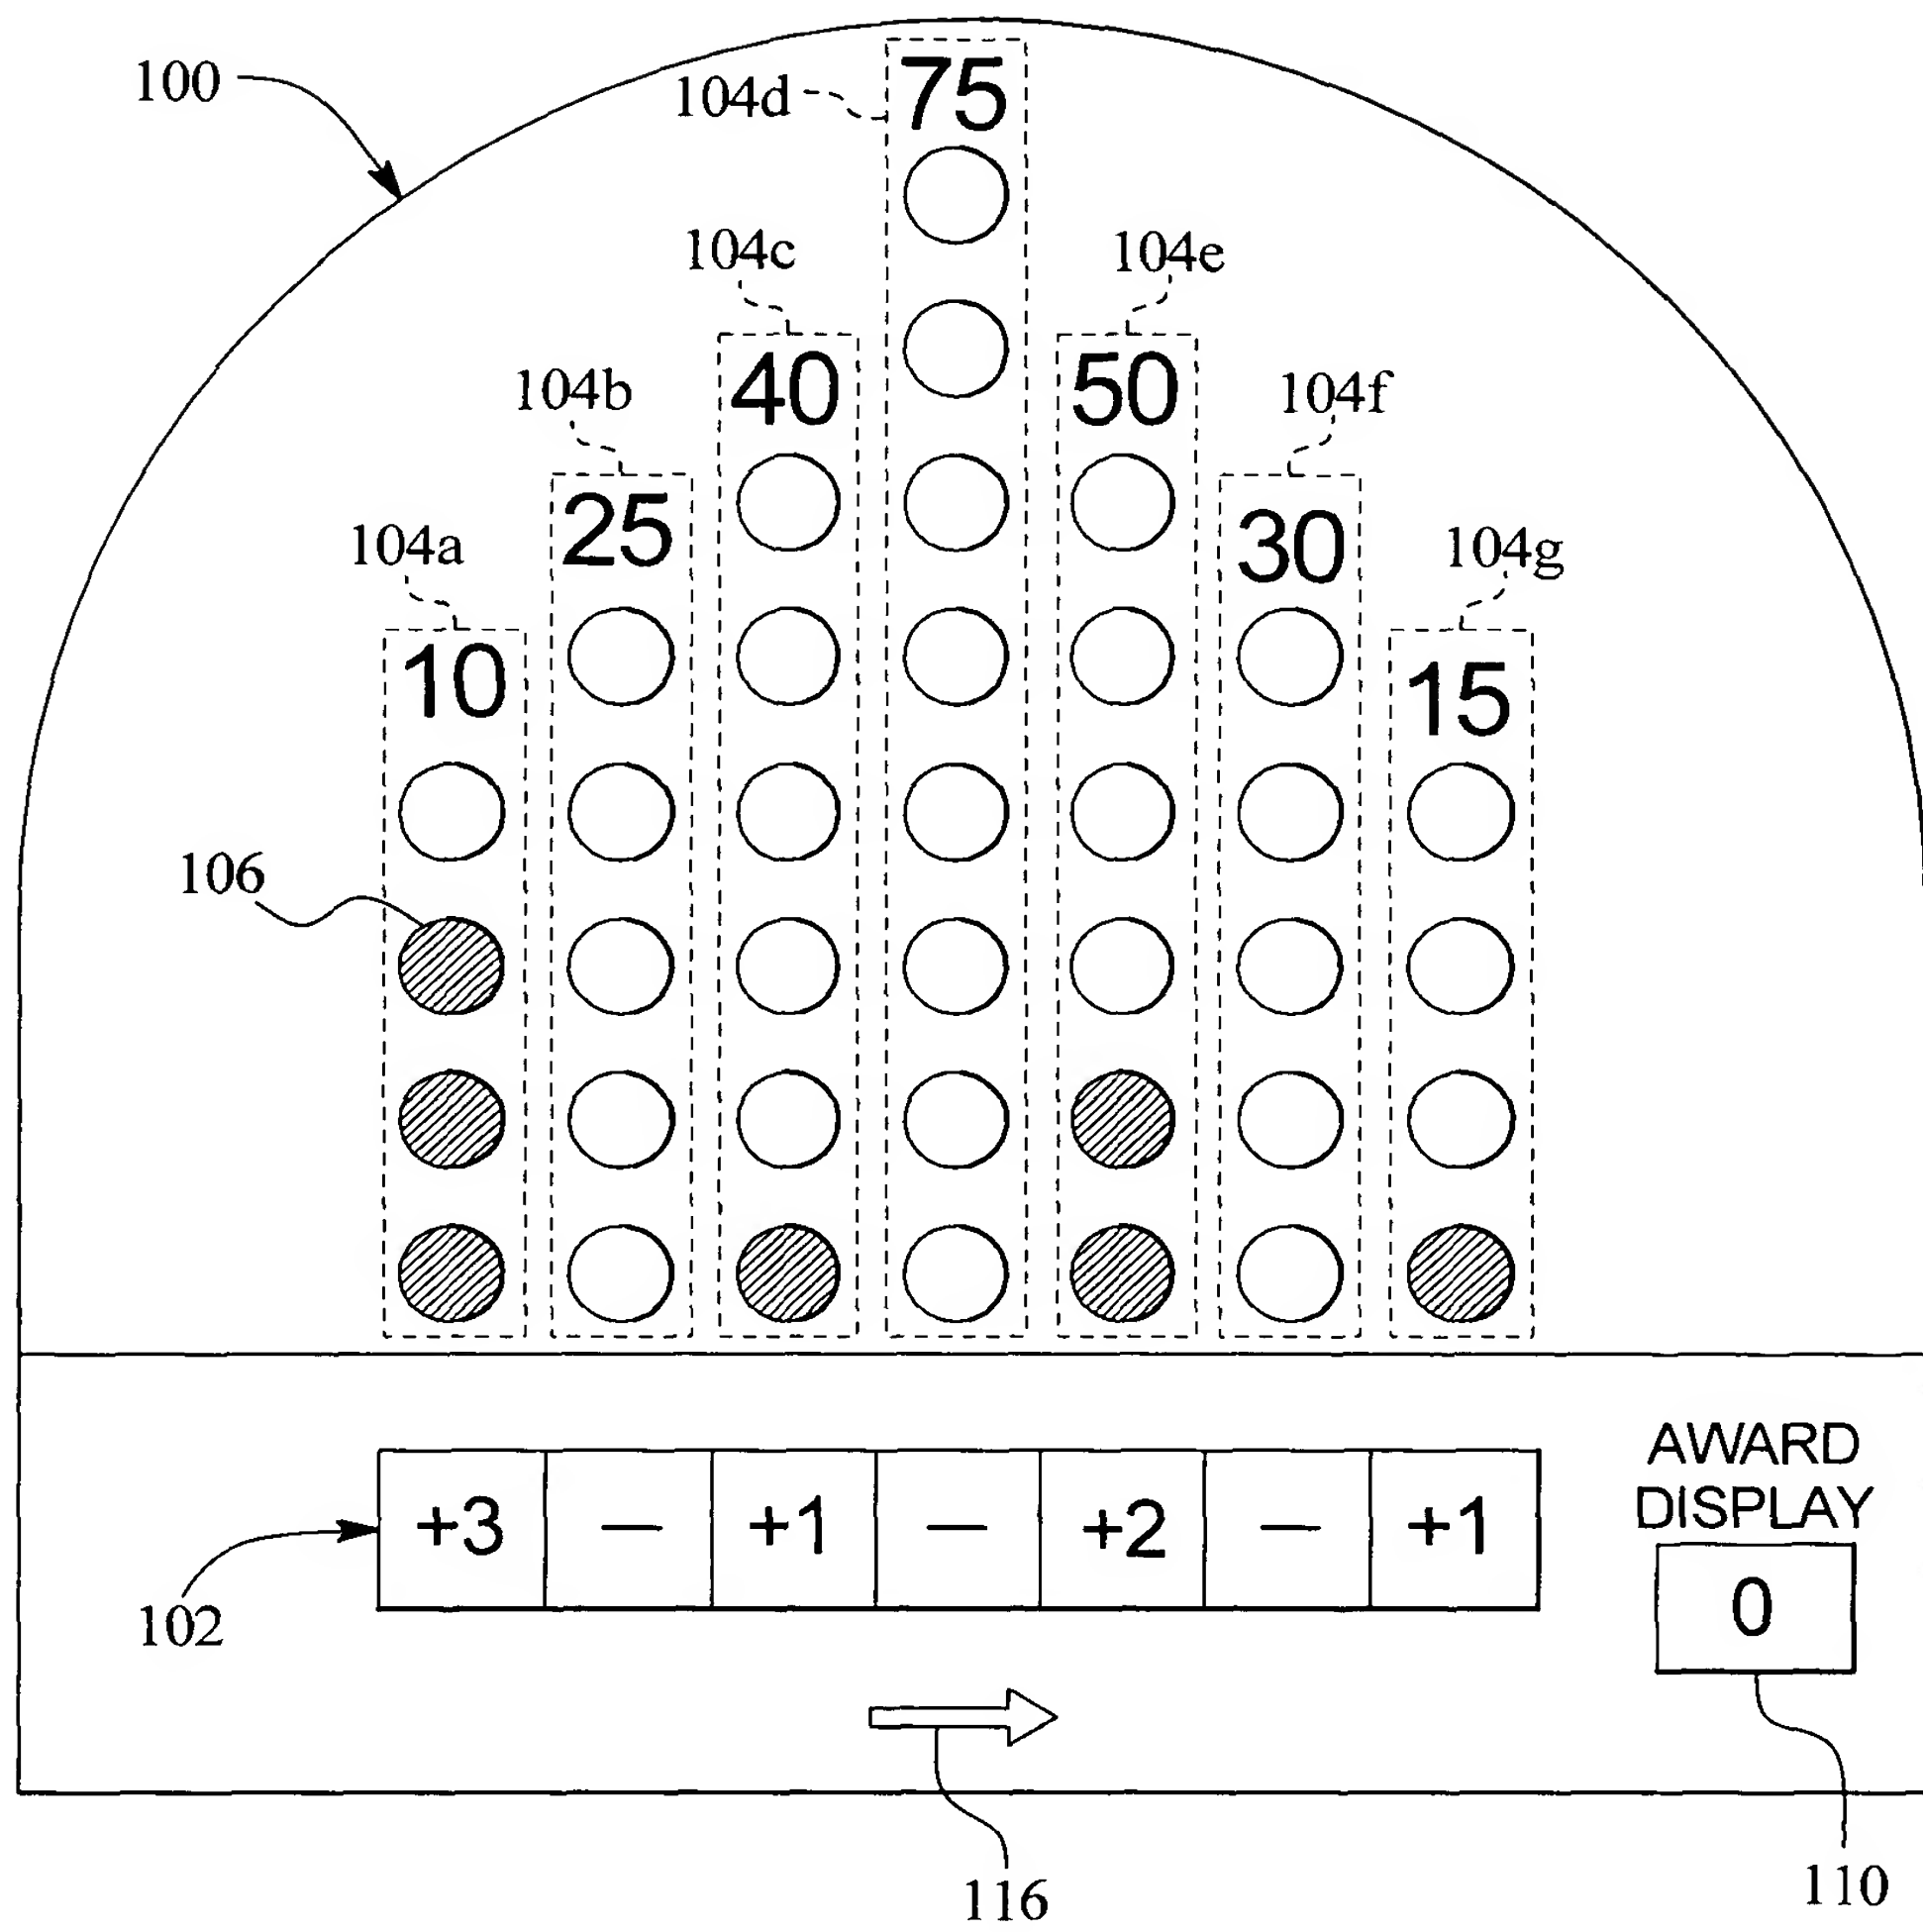 


FIG. 5C

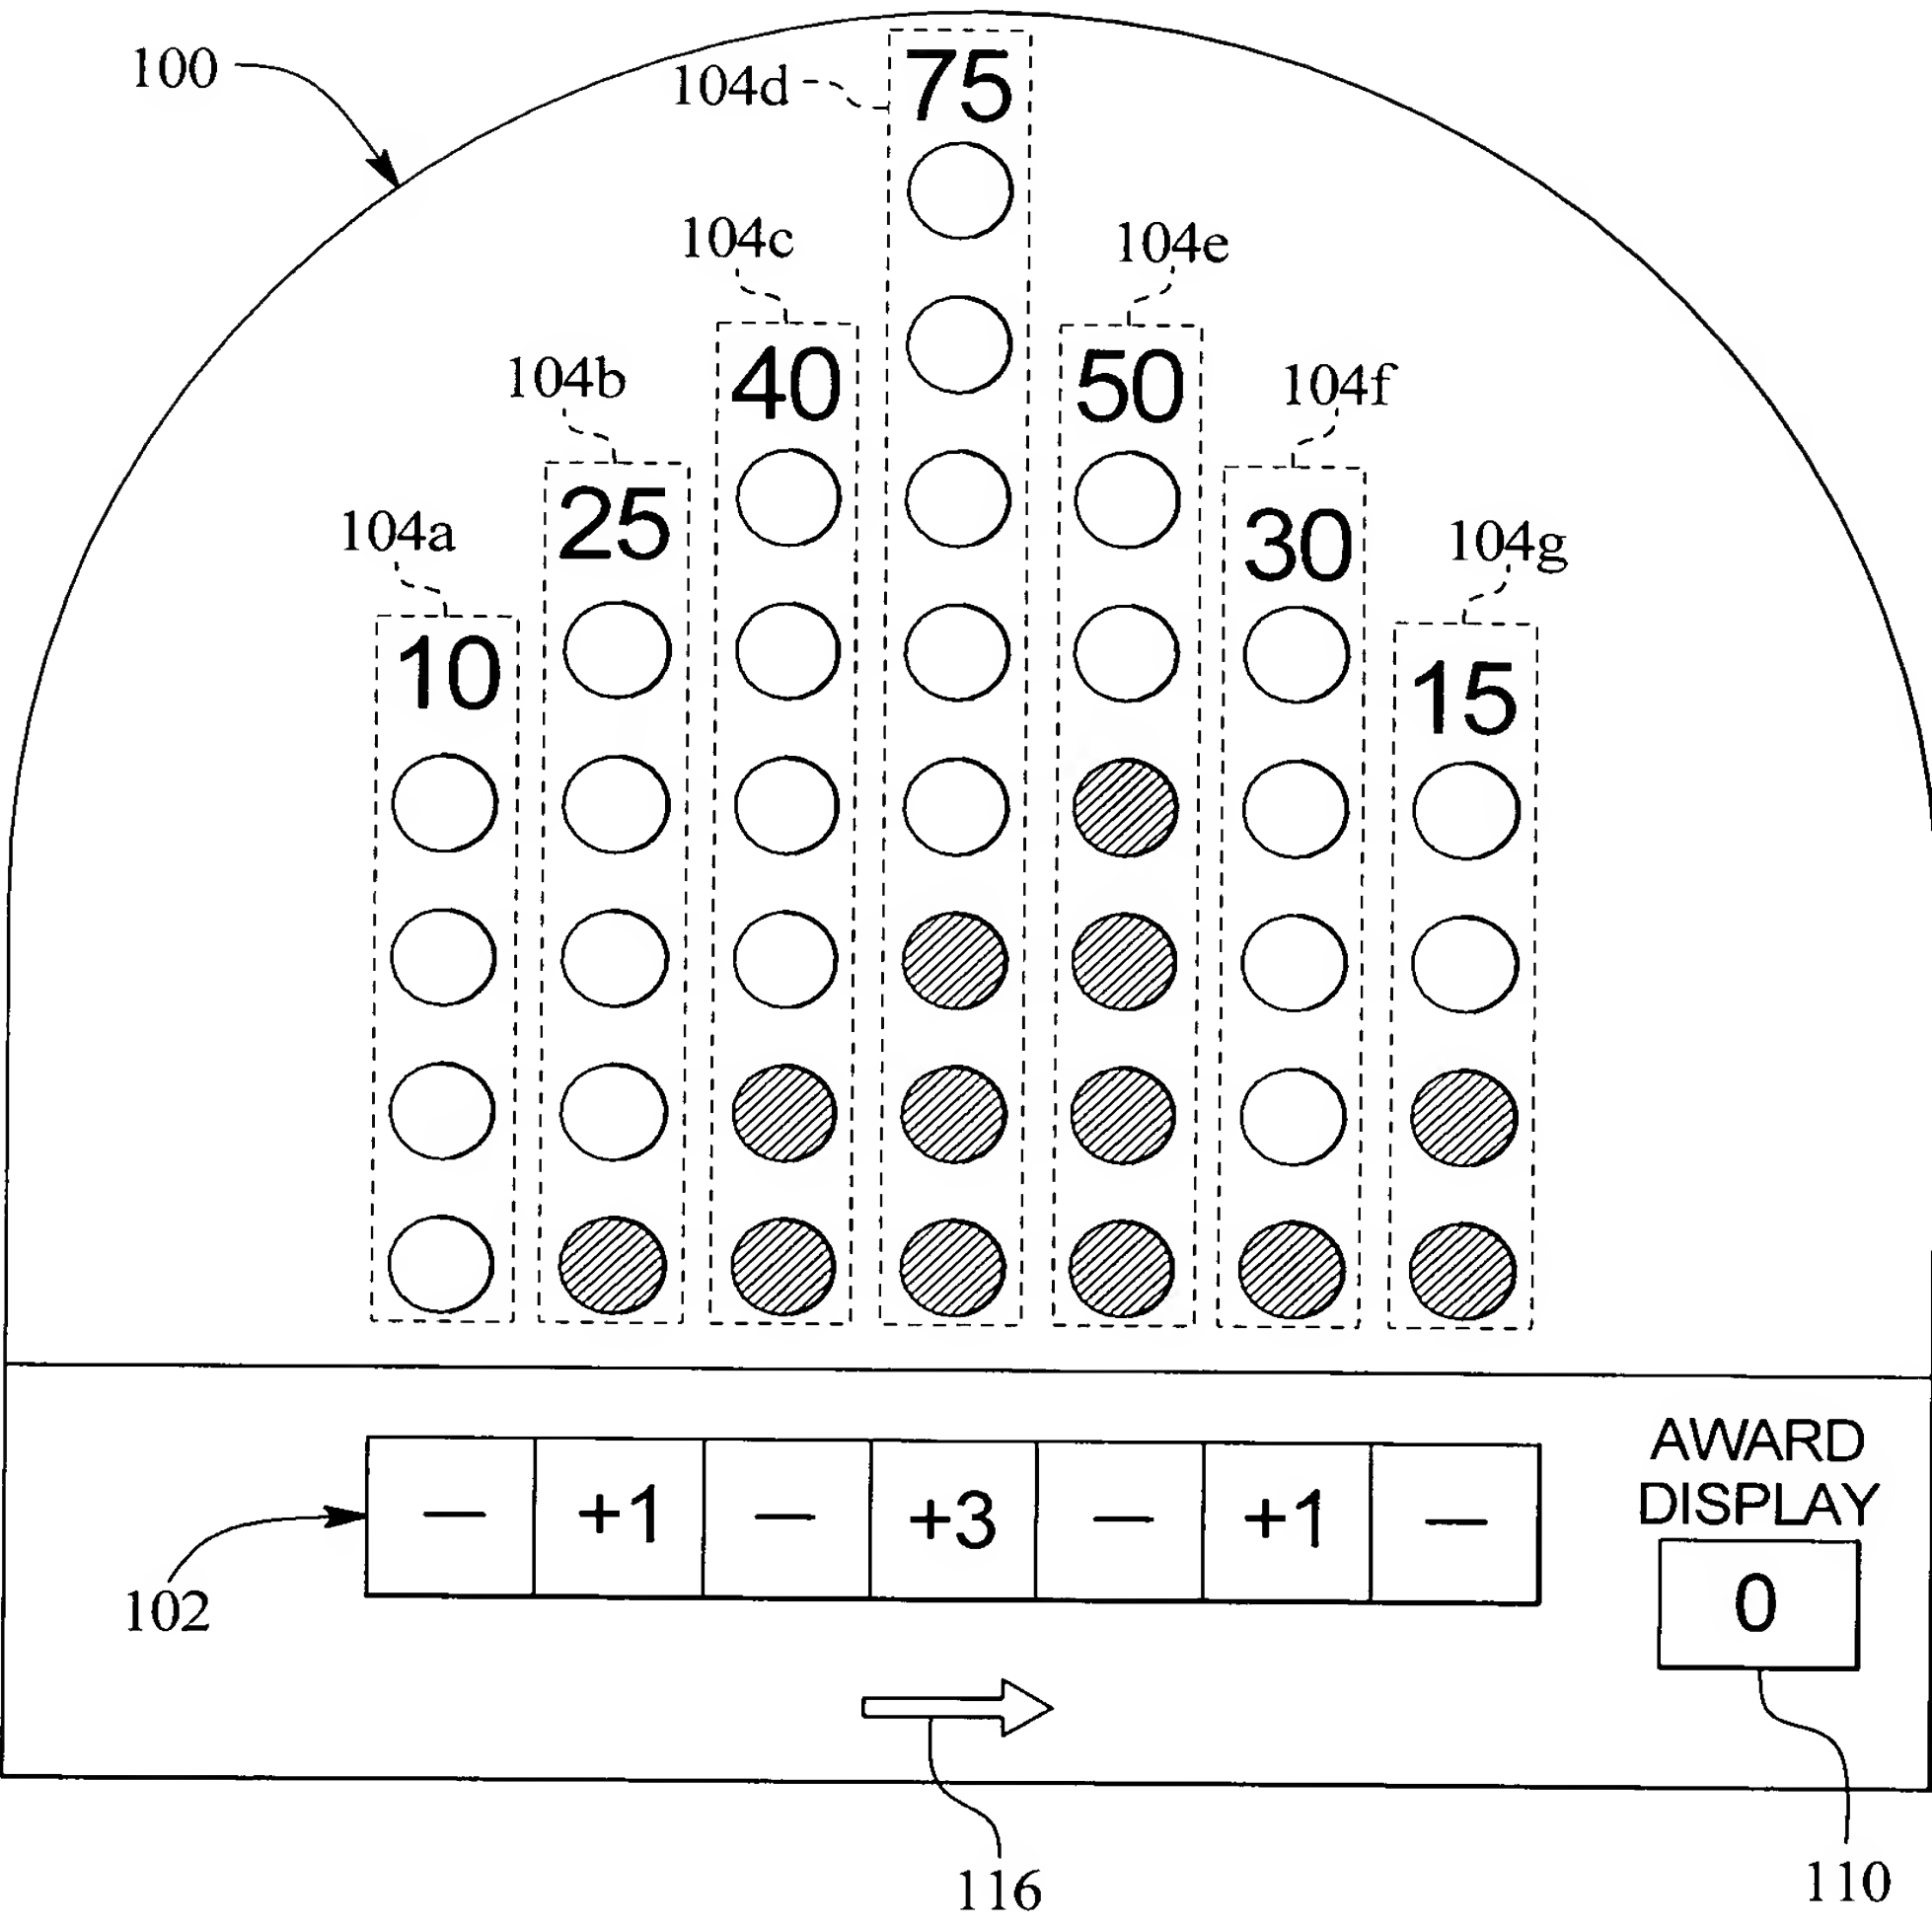 


FIG. 5E

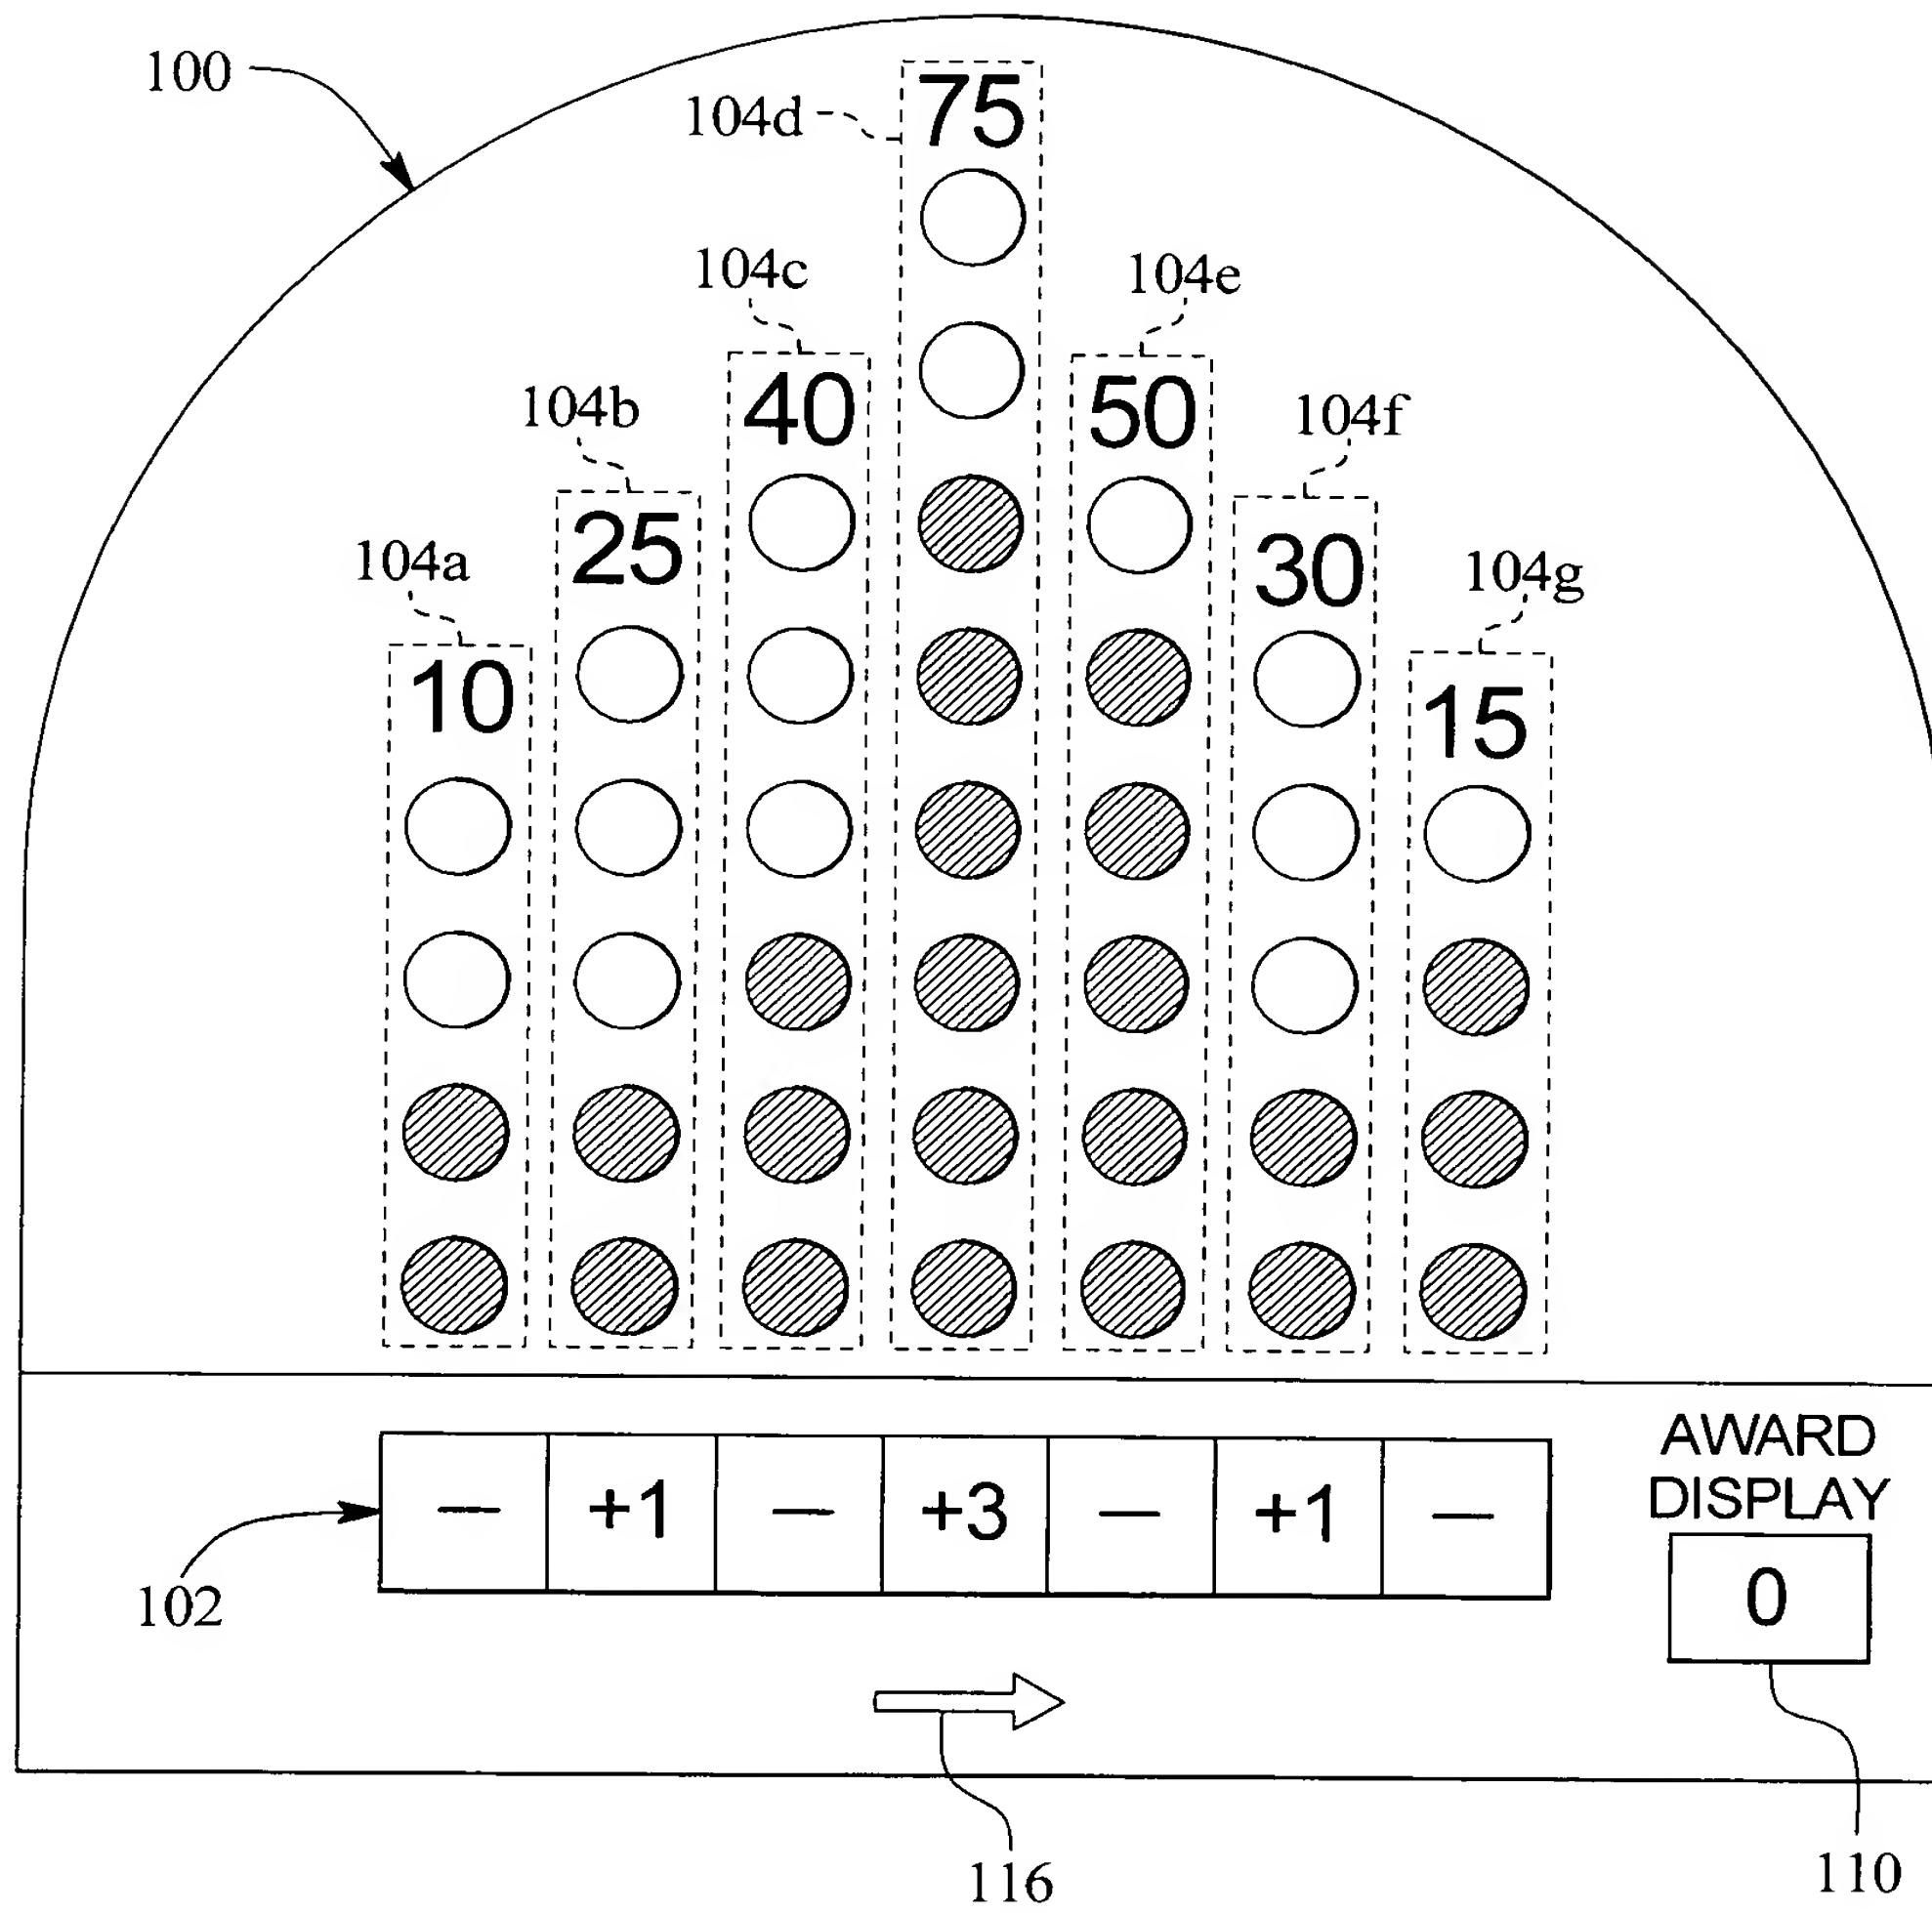 


FIG. 5F

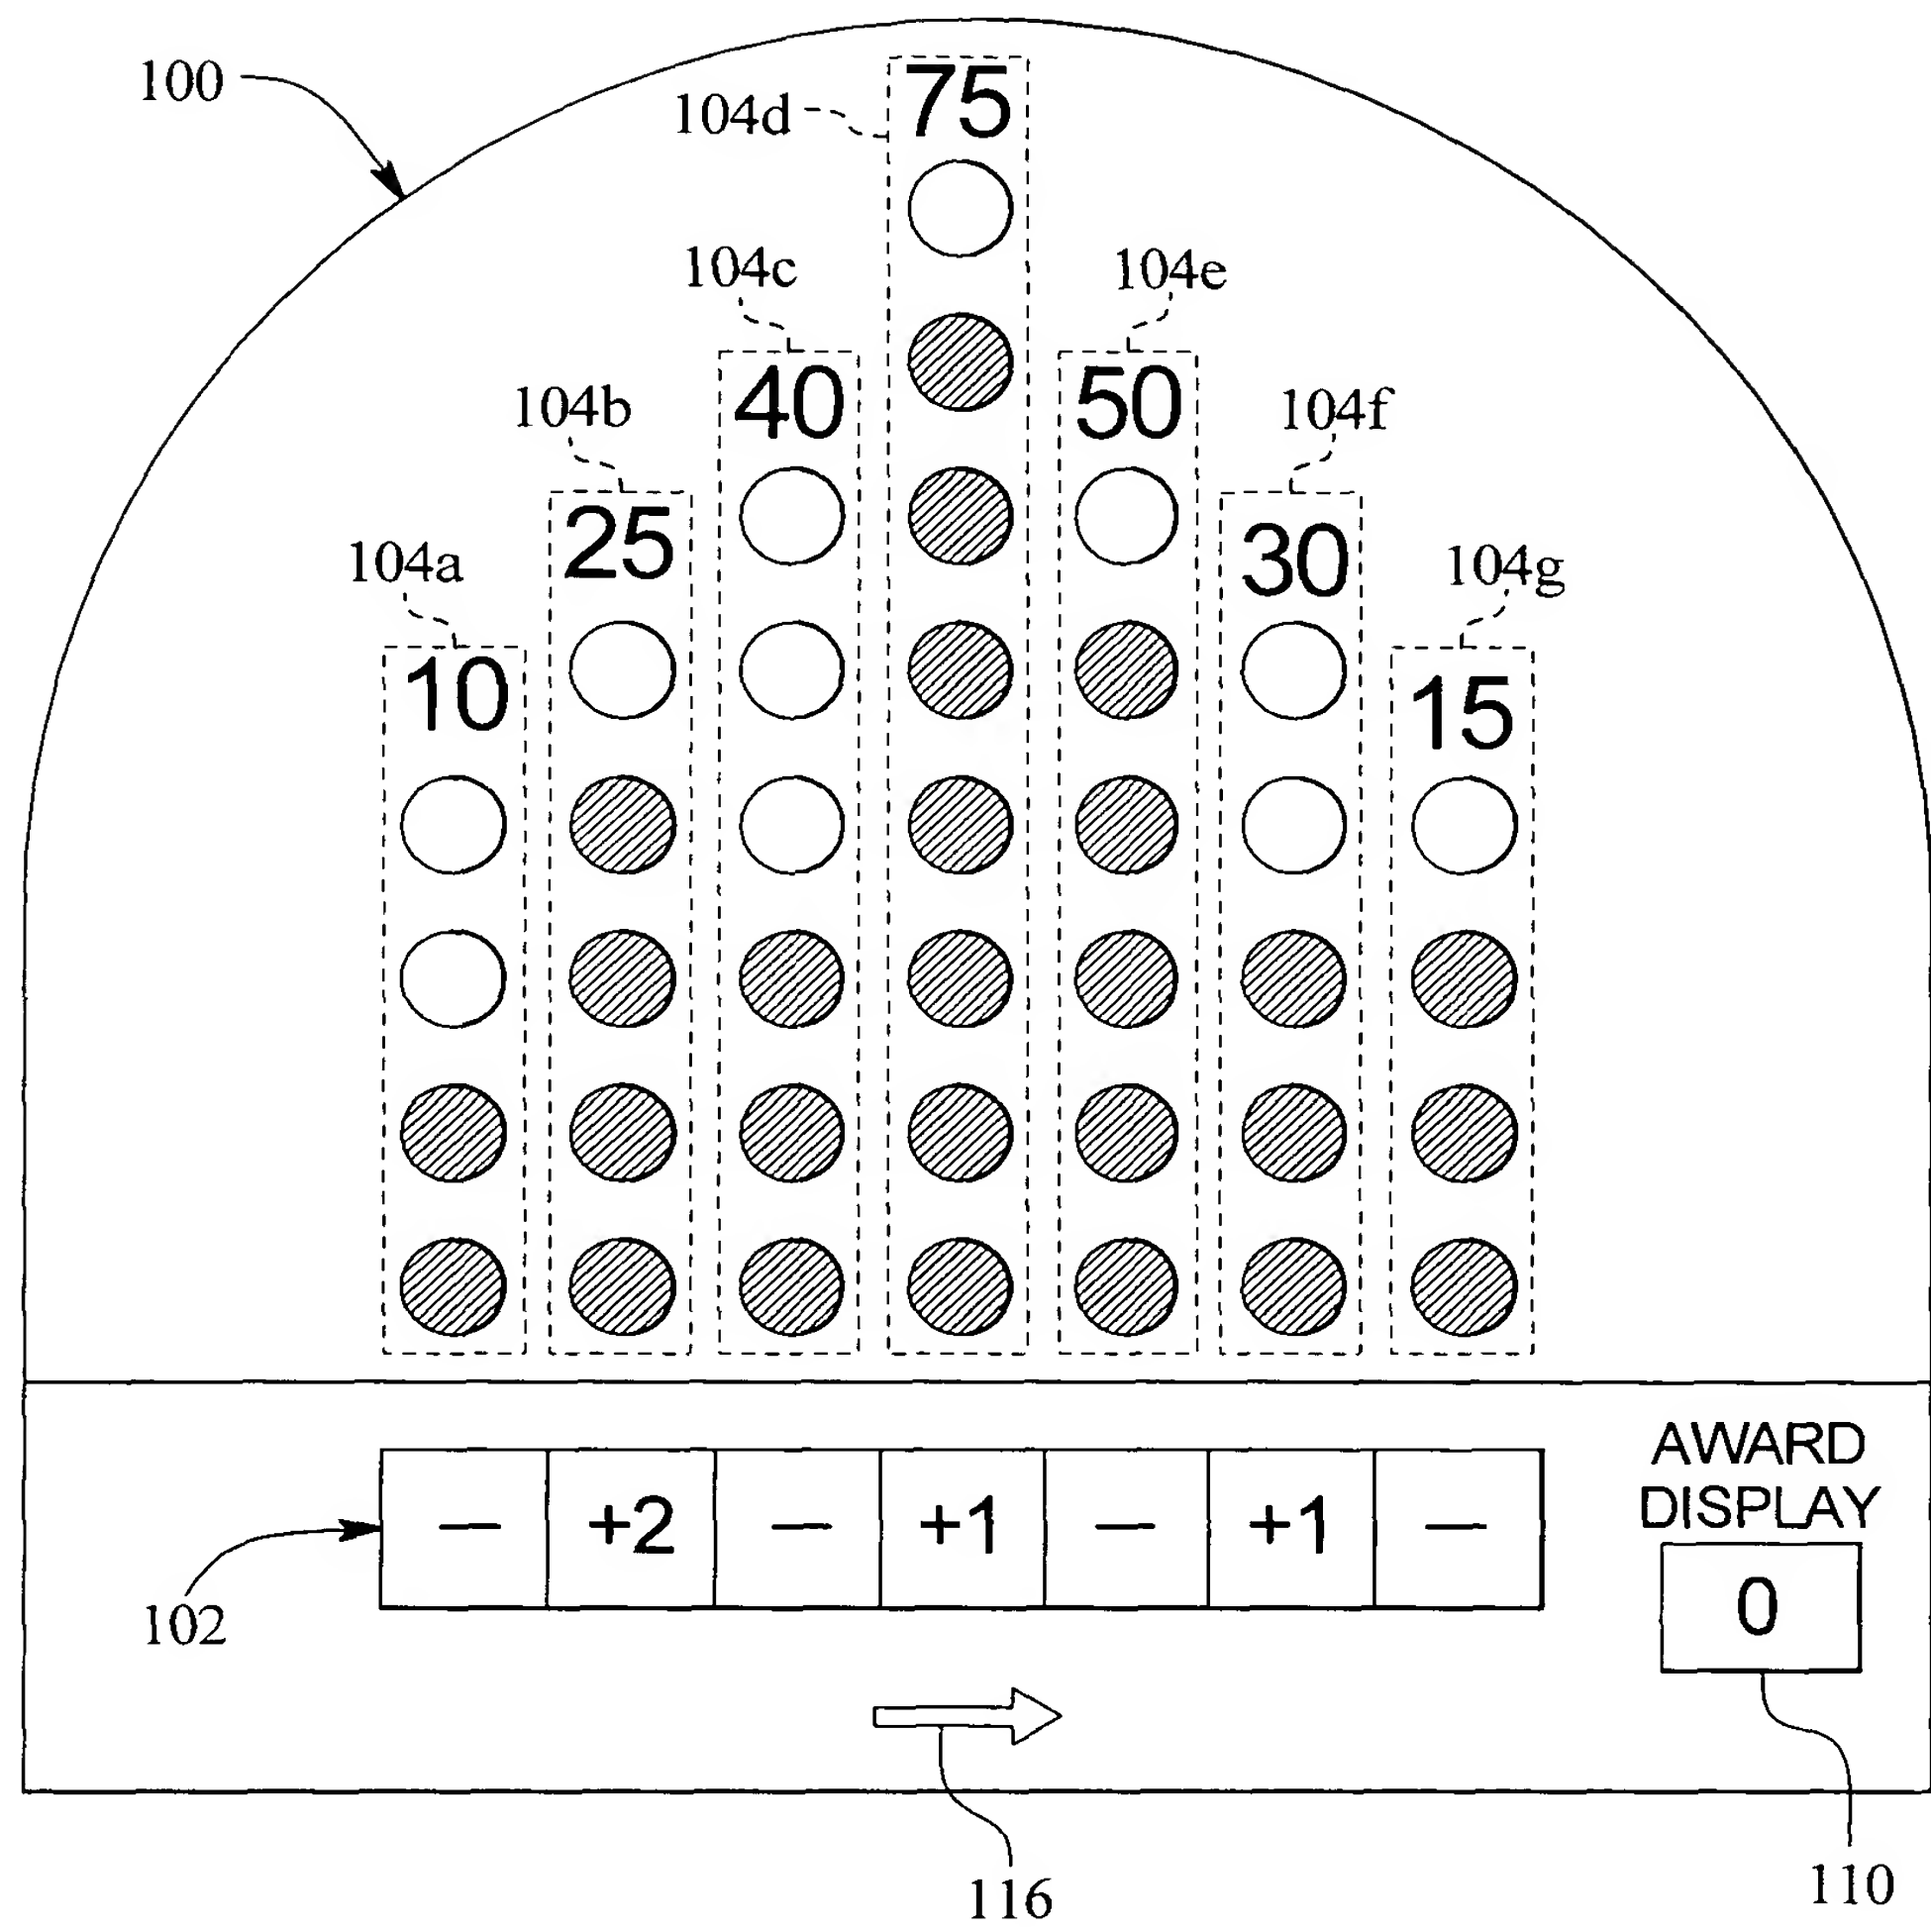 


FIG. 5G

